


NETGEAR®

Telstra Wi-Fi 4GX Advanced III AirCard 810S

User Manual

July 2015
202-11529-02

350 East Plumeria Drive
San Jose, CA 95134
USA



Support

Contact Telstra at livechat.telstra.com for technical support.

Compliance

For regulatory compliance information, visit <http://www.netgear.com/about/regulatory>.

See the regulatory compliance document before connecting the power supply.

Trademarks

© NETGEAR, Inc. NETGEAR and the NETGEAR Logo are trademarks of NETGEAR, Inc. Any non-NETGEAR trademarks are used for reference purposes only.

Contents

Chapter 1 Get Started

Know Your Device	2
Manage Your Device and Settings	2
Power Key	3
Status LED	3
Touch Screen	3
Touch Screen Elements	4
Accessories	5
Power Sources	6
Jump Boost Another Device	6
Set Up and Connect to the Internet	7
Install the Micro SIM Card	8
Install the Battery	9
Connect to the Internet	10
Personalise the Hotspot	10
Additional Information	11
Tethered Mode	11
NETGEAR AirCard App for Smartphones and Tablets	12
Hotspot Web Page	12
Security Credentials	13
External Antennas	14

Chapter 2 Use Your Mobile Hotspot

View Data Usage	16
Manage Wi-Fi	17
Specify the Wi-Fi Settings	18
Connect to Wi-Fi from Wireless Device	22
Enable Guest Wi-Fi	24
Enable Dual-Band Wi-Fi	27
Set the Maximum Number of Connected Devices	29
View or Block Connected Users	31
Set Mobile Broadband Options	39
View Messages	42
View Alerts	44
Extend Battery Life	45
Adjust Wi-Fi Settings to Optimise Battery Life	46
Adjust Display Settings to Increase Battery Life	50
Recharge the Battery	53
USB Tethering	55

Enable Airplane Mode	56
Manage Hotspot Security	58
Change Network Names and Passwords	59
Change Hotspot Web Page Login Settings	62
Change Device Encryption Security Settings.....	64
View Details About Your Mobile Hotspot.....	65
Update Mobile Hotspot Software and Firmware	67

Chapter 3 Advanced Settings

Back Up and Restore Hotspot Settings.....	72
Manage Wi-Fi Network Options	73
Enable SIM Security	74
Configure Mobile Broadband.....	75
View WAN Information.....	75
Enable Port Forwarding	76
Enable Port Filtering	77
Enable IP Pass Through Mode	78
Enable VPN Pass Through	79
Configure APN Details	80
Enable DMZ	83
Set LAN Options	84

Chapter 4 Frequently Asked Questions

Why can't I connect a device to the hotspot?.....	87
Why can't I access the Internet?	87
Why isn't my battery charging?	87
Why is the signal indicator always low?.....	87
Why is the download or upload speed slow?	88
How do I go back to the hotspot web page?	88
What do I do if I forget my admin login password?	88
How do I disconnect from the mobile broadband network?	90
Why doesn't the Connect / Disconnect button appear on the hotspot web page?	91
How can I extend the life of the battery?.....	92
How do I turn the hotspot off?.....	92
How do I find out how many users are connected to my hotspot's Wi-Fi networks?.....	92
The touch screen is not lit. How do I know if the hotspot is still powered on?	92
How do I find my computer's IP address?	92
How do I find a device's MAC address?	93
Where can I find more information?.....	94

Chapter 5 Troubleshooting

The Wi-Fi network name does not appear in the list of networks.....	96
---	----

The No Signal icon displays on either the touch screen or the hotspot web page	96
Your device cannot access the hotspot web page when connected to a VPN	96
The hotspot cannot connect to a computer running Windows Vista.	96
The hotspot does not connect to your service provider’s network.	97
Reset the hotspot	97
View Alerts	99
SIM Not Installed.	99
SIM Error — Check SIM	99
SIM Locked.	100
Temperature-Related Alerts	100
Connection Alerts	100

Appendix A Specifications

Mechanical Specifications	104
Environmental Specifications.	104
Supported RF Bands	104

Appendix B Tips and Safety Guidelines for Lithium-Ion Batteries

Battery Tips	105
General Battery Safety.	105
Appropriate Batteries and Chargers.	106
Battery Disposal.	106

Get Started

1

This chapter provides an overview of Telstra Wi-Fi 4GX Advanced III features, and instructions for how to set up your mobile hotspot and connect to the Internet. The chapter covers the following topics:

- *Know Your Device*
- *Set Up and Connect to the Internet*
- *Additional Information*

Note: Firmware updates with new features and bug fixes are available at downloadcenter.netgear.com. Some products regularly check the site and download new firmware, or you can check for and download new firmware manually. If the features or behavior of your product do not match what is described in this manual, you might need to update your firmware.

Know Your Device

Your mobile hotspot enables you to create a Wi-Fi access point in any location with cellular network coverage. Use a Wi-Fi access point to connect your laptop and other Wi-Fi-capable devices to your service provider's mobile broadband network and connect to the Internet.

You can also use your mobile hotspot in tethered mode by connecting it to your laptop with the USB cable to access the Internet. For more information, see [Tethered Mode](#) on page 11.

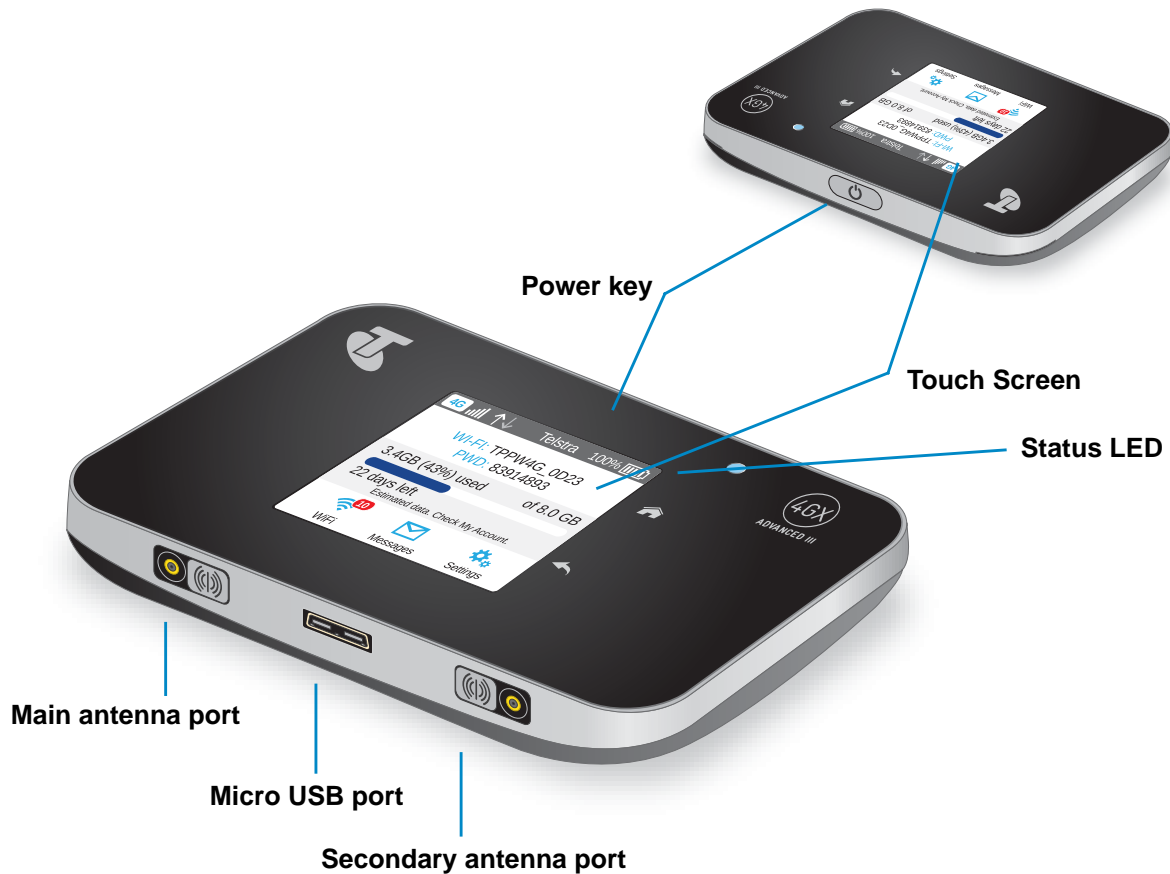


Figure 1. Hotspot keys and features

Manage Your Device and Settings

You can manage your device and change settings using the following features:

- **The device's touch screen.** See [Touch Screen](#) on page 3.
- **The hotspot web page.** See [Hotspot Web Page](#) on page 12.
- **A mobile app.** See [NETGEAR AirCard App for Smartphones and Tablets](#) on page 12.

Power Key

Use the **Power** key to wake the hotspot and to power the device on and off.

Table 1. Power key usage

Desired Result	Action
Turn on the hotspot.	Press and hold the Power key for three seconds.
Turn off the hotspot.	Press and hold the Power key for five seconds.
Wake up the Wi-Fi signal and screen.	Press and quickly release the Power key.

Status LED

The LED indicates the device's connection status.

Table 2. LED indicator patterns

Color	LED pattern	What the pattern means
Blue	Slow blink (every five seconds)	The data connection is ready for use. The Wi-Fi is on, WWAN is connected, and Wi-Fi devices are available.
Amber	Blink (every five seconds)	The data connection is not ready for use (disconnected or no signal).
Blue	Double blink (every five seconds)	Data is transferring (uploading or downloading) on the data connection.
Blue/ Amber	Slow blink, alternating blue and amber	The device is installing firmware or software updates.

Touch Screen

The hotspot's touch screen displays the following information:

- Wi-Fi name and password.
- Network signal icons. See [Table 3](#) on page 4 for details.
- Data usage details.
- Wi-Fi details (number of connected devices).
- System alerts.
- Network provider message notification.

For advanced settings, use a Wi-Fi-enabled device to connect to the hotspot and then visit the hotspot web page at <http://m.home> or <http://192.168.1.1>.

Touch Screen Elements

You can use the touch screen icons and other screen elements to view the hotspot's status, configure Wi-Fi band settings, view data usage details, and view system alerts and carrier messages.







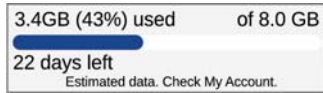





Figure 2. Touch Screen display

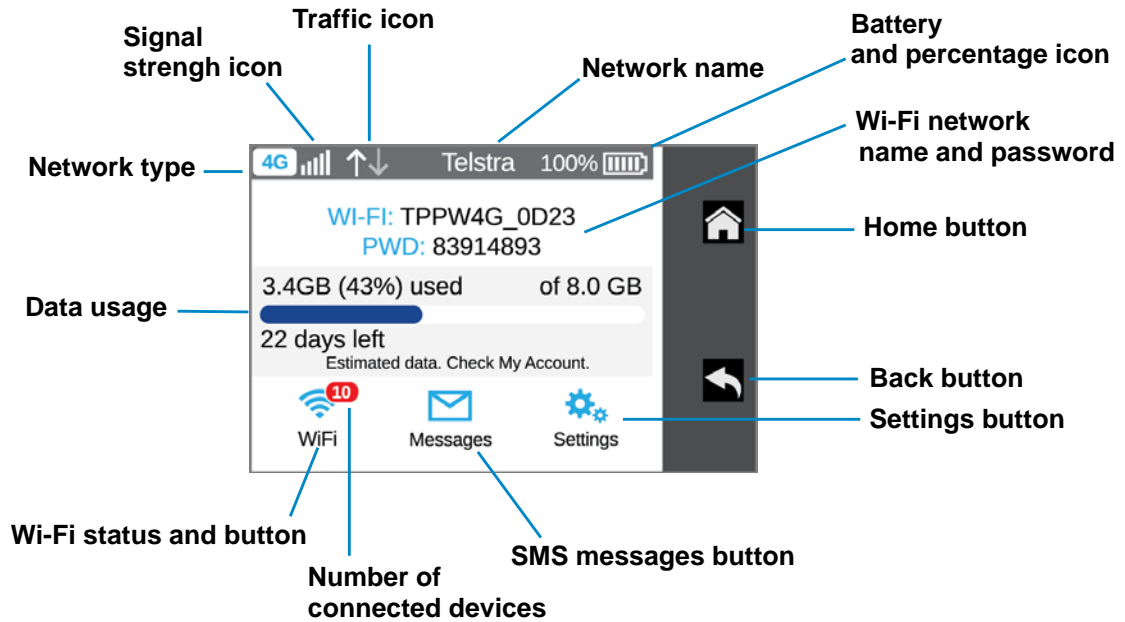Table 3. Touch Screen icons

Icon	Indicates
	Home button. To display the touch screen home screen, tap the Home button.
	Back button. To return to the touch screen that was previously displayed, tap the Back button.
	The hotspot is not receiving a signal.
	Signal strength. Bars indicate the strength of the cellular Internet signal. <ul style="list-style-type: none"> • 1 bar. The hotspot signal strength is low. • 5 bars. The hotspot signal strength is excellent.
<p>4G</p> <p>H</p> <p>3G</p>	Network indicator. These icons show the type of cellular network: <ul style="list-style-type: none"> • 4G. An LTE network is available. • H. HSPA and dual-carrier networks are available. • 3G. A 3G network is available.

Table 3. Touch Screen icons (continued)

Icon	Indicates
	Traffic. Arrows show the cellular Internet traffic status: <ul style="list-style-type: none"> • Gray outline. The hotspot is connected. • Solid white outline. The hotspot is sending or receiving information. • None. The hotspot is not connected.
	Roaming. The hotspot is connected to a network other than Telstra's.
Network name	The name of the network carrier.
	Battery and percentage icon. Battery is partially or fully charged. <ul style="list-style-type: none"> • 5 bars. The battery is fully charged. • 1 bars. The battery charge is low.
	Battery icon. The battery is recharging.
	Battery icon. The battery level is critically low.
ALERTS (2)	Alert message notification. To view the alerts, tap the ALERTS button.
Default main Wi-Fi name and password	Wi-Fi-enabled devices use the Wi-Fi name and password to connect to the mobile hotspot.
Guest Wi-Fi name and password	When guest Wi-Fi is enabled, tap Wi-Fi > Guest Wi-Fi to display the guest Wi-Fi network name and password. For information about how to change these names and passwords, see <i>Manage Hotspot Security</i> on page 58.
	Estimated data usage for the current billing period.
	Wi-Fi status and button. Displays Wi-Fi status (blue when Wi-Fi is turned on). To display the Wi-Fi screen, tap the Wi-Fi button.
	Messages button. The button shows the number of unread messages. To display the Messages screen, tap the Messages button.
	Settings button. To display the Settings screen, tap the Settings button.

Accessories

The following accessories are included with your hotspot:

- **Micro USB cable.** Use this cable to recharge the battery or tether the mobile hotspot to your computer. For more information, see *Tethered Mode* on page 11.
- **Wall charger.** Use an AC adapter with the USB cable to recharge the battery or to power the mobile hotspot from a wall socket. For more information, see *Recharge the Battery* on page 53.

- **Jump boost cable.** Use the jump boost cable to charge another mobile device, such as a tablet or smartphone. For more information, see [Jump Boost Another Device](#) on page 6.

You can purchase the following accessories separately:

- DC112A Smart cradle
- Extended battery

For more information, visit www.netgear.com/telstraaccessories.

Power Sources

Your hotspot can receive power from any of the following sources:

- Rechargeable battery included with the hotspot
For more information, see [Install the Battery](#) on page 9.
- Wall socket using the AC adapter and USB cable
For more information, see [Recharge the Battery](#) on page 53.
- USB port on your computer
For more information, see [Recharge the Battery](#) on page 53.

Jump Boost Another Device

You can give a boost to your smartphone if it is low or out of battery power by connecting it to the hotspot's jump boost cable and starting the boost from the touch screen or the hotspot web page.



Figure 3. Jump boost cable

Note: You cannot charge the hotspot while it is boosting another device.

- **To start the jump boost of another device from the touch screen:**
 1. Plug the jump boost cable into your hotspot.
 2. Plug the device that you want to charge into the other end of the jump boost cable.

On the Home screen, a pop-up window appears with boost options. If the pop-up window does not display, tap **Settings > Jump Boost**.
 3. Tap one of the boosting options (30, 60, or 90 minutes).
- **To start the jump boost of another device from the hotspot web page:**
 1. Plug the jump boost cable into your hotspot.
 2. Plug the device that you want to charge into the other end of the jump boost cable.
 3. On the home page, log in as an administrator.
 4. Click the **Jump Boost** button.
 5. Select one of the boosting options (30, 60, or 90 minutes).

Set Up and Connect to the Internet

To install the battery and micro SIM card in your hotspot, complete the steps in the sections listed in steps 1 and 2.

- **To set up and connect to the Internet:**
 1. Install the Micro SIM card.

For more information, see [Install the Micro SIM Card](#) on page 8.
 2. Install the battery.

For more information, see [Install the Battery](#) on page 9.
 3. Connect to the Internet.


For more information, see [Connect to the Internet](#) on page 10.
 4. Personalise the hotspot.

For more information, see [Personalise the Hotspot](#) on page 10.


Install the Micro SIM Card

➤ **To insert the SIM card:**


1. Remove the hotspot back cover by lifting at the notch on either corner of the device.

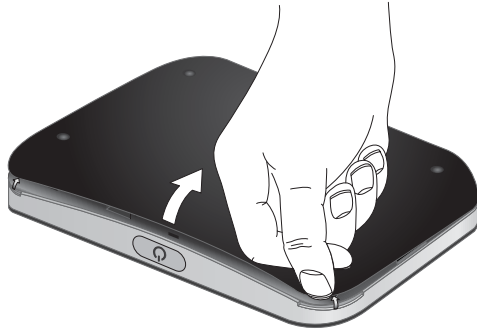

2. If the battery is present, remove it.
3. Insert the micro SIM card.

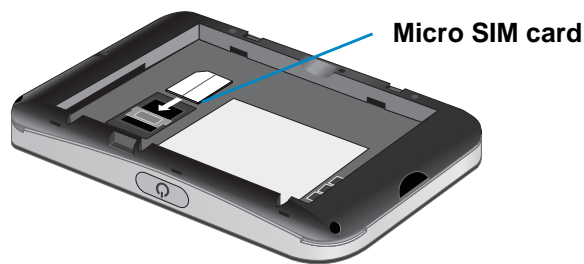

4. Insert the battery as shown.

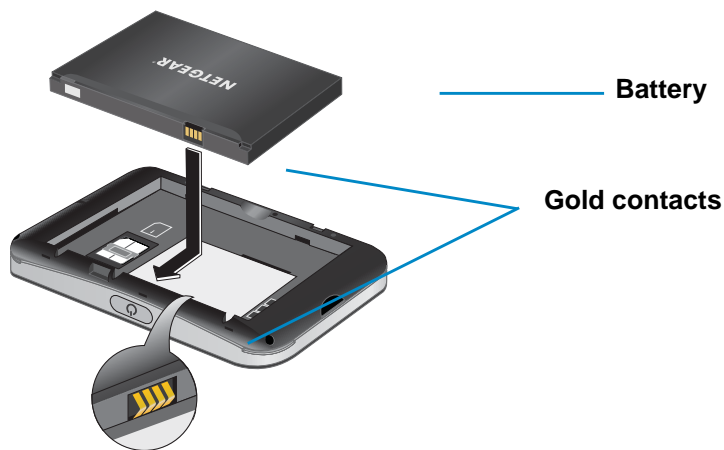


Ensure that the gold contacts on the battery line up with the gold contacts on the device.

5. Replace the hotspot cover.


Install the Battery

➤ **To install the battery:**


1. Remove the hotspot back cover by lifting at the notch on either corner of the device.

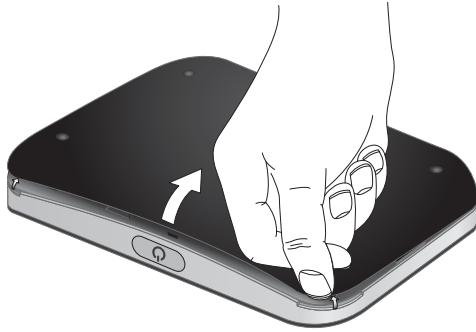

Make sure that the micro SIM card is already installed. For more information, see [Install the Micro SIM Card](#) on page 8.

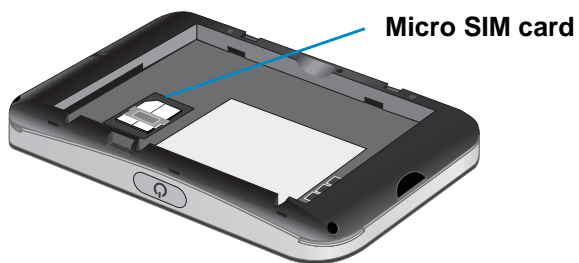

2. Insert the battery as shown.

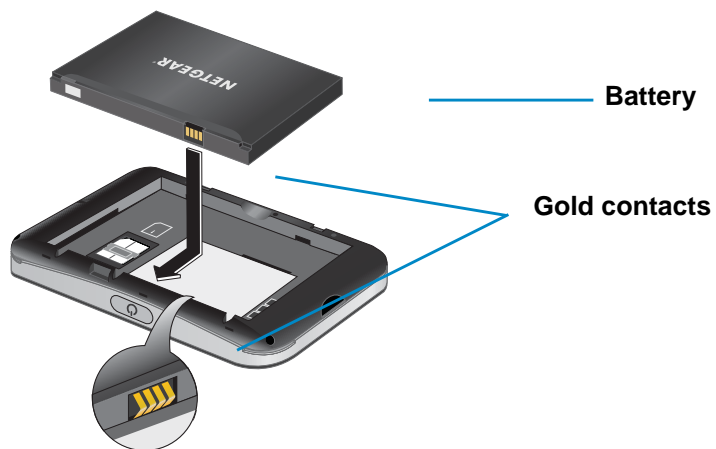

Ensure that the gold contacts on the battery line up with the gold contacts on the device.

3. Replace the back cover.

Note: The battery comes partially charged and ready to use. When the battery needs recharging, follow the instructions in *Recharge the Battery* on page 53.

Connect to the Internet

Your computer and other devices can connect to the hotspot wirelessly. You can also connect to the Internet with the hotspot tethered to a computer with the USB cable. See *Tethered Mode* on page 11.

➤ **To connect to the Internet:**

1. Press and hold the **Power** key for a few seconds.



The hotspot powers on and automatically searches for and connects to your network provider's mobile broadband network.

2. Connect your computer or other device to your Wi-Fi network:
 - a. Make sure that Wi-Fi is enabled on your device and search for available Wi-Fi networks.
 - b. Select the Wi-Fi name displayed on the hotspot touch screen and connect to it.
 - c. When prompted, enter your Wi-Fi password as it displays on the hotspot touch screen.
3. Launch your browser to surf the Internet.

Personalise the Hotspot

You can personalise the hotspot and change its settings using the following methods:

- **Touch Screen.** Use the touch screen to make basic Wi-Fi and other settings changes.
- **Web page.** Use the hotspot web page to make more detailed settings changes than the basic settings changes offered on the touch screen.

Use a Wi-Fi-enabled device to connect to the hotspot and then use a browser to display the hotspot web page (<http://m.home> or <http://192.168.1.1>). Log in as an administrator to make changes. The default administrator login password is admin. Best practice is to set a more secure password.

Additional Information

The following topics are covered in this section:

- *Tethered Mode* on page 11
- *NETGEAR AirCard App for Smartphones and Tablets* on page 12
- *Hotspot Web Page* on page 12
- *Security Credentials* on page 13
- *External Antennas* on page 14

Tethered Mode

You can use your hotspot in tethered mode (connected to a computer using the USB cable) instead of connecting to it using Wi-Fi.

Note: The first time that you use your hotspot in tethered mode, the operating system detects the new device.

➤ To install drivers on computers running operating systems other than Windows XP:


1. Ensure that the hotspot is powered off.
2. Connect the hotspot to your computer using the USB cable.

The hotspot automatically powers on.


You can visit the hotspot web page at <http://m.home> or <http://192.168.1.1> to customize your hotspot's advanced settings.

➤ To install drivers on a computer running Windows XP:

1. To wake up the device, press the **Power** key.
2. Tap the **Home** (🏠) button.

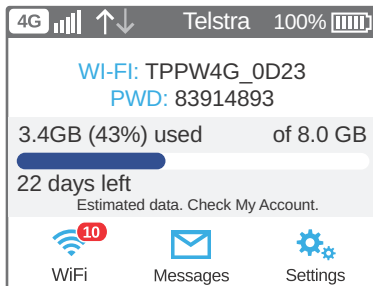


3. Tap the **Settings** button.

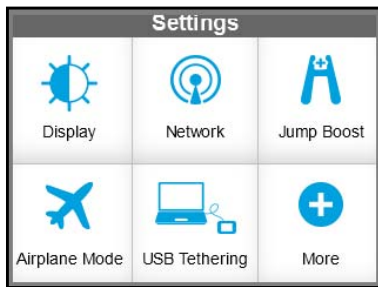

4. Tap the **USB Tethering** button.

USB tethering should be on by default. If USB tethering is not on, slide the **OFF** button to the **ON** position.

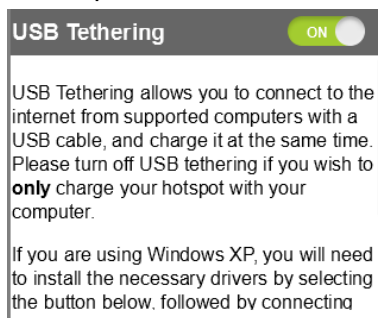

5. Tap the **Install Win XP drivers** button.

This button is located at the bottom of the USB Tethering screen.

6. Connect the hotspot to your computer using the USB cable.

The hotspot installs the necessary driver.

After the driver is installed, you can visit the hotspot web page at <http://m.home> or <http://192.168.1.1> to customize your hotspot's advanced settings.

NETGEAR AirCard App for Smartphones and Tablets



Download and use the complimentary NETGEAR AirCard app to view your connection, settings, and data usage from your smartphone or tablet. Search the app store for NETGEAR AirCard.



To manage all hotspot settings, visit the hotspot web page at <http://m.home> or <http://192.168.1.1>.

Hotspot Web Page

Your hotspot comes configured and ready to use. Use the hotspot web page to manage advanced settings.

Log in as an administrator to change settings and view detailed information. (The default administrator login password is admin.)

➤ **To log in as an administrator:**

1. From a computer or wireless device that is connected to your network, launch an Internet browser.
2. Enter **http://m.home** or **http://192.168.1.1**



The screenshot shows a web form titled "Sign In". It contains a single-line text input field, a "Sign In" button, and a "Remember me" checkbox.

3. Enter the password in the **Sign In** field.
The default password is **admin**. The password is case-sensitive.
4. Click the **Sign In** button.
The Home page displays.

After you log in, you can access all of the features available on the touch screen plus advanced features. For example, you can do the following:

- Change the SSID, Wi-Fi passwords, admin login, and Wi-Fi encryption settings.
- Select a custom Wi-Fi profile (dual-band Wi-Fi, guest Wi-Fi).
- Set auto-connect options.
- View data usage.
- Change security settings and router options.

Security Credentials

Three passwords are associated with the hotspot:

- **Wi-Fi password.** Use this to connect your computer or other Wi-Fi device to your mobile hotspot network. This character string is unique to your device. It displays on the main hotspot touch screen. If the screen is blank (a power-saving feature), press and quickly release the **Power** key. The default Wi-Fi password is printed on a label under the battery.
- **Guest Wi-Fi password.** When the guest Wi-Fi network is enabled, guests can use this password to access the network.
- **Admin login password.** Use this to log in to the hotspot web page as an administrator. You must log in as an administrator to use certain features and to make changes to your hotspot settings. The default admin login password, admin, is printed on a label under the battery. The admin login password can be 5–31 characters.

You can change these passwords on the hotspot web page (<http://m.home> or <http://192.168.1.1>). For more information, see [Manage Hotspot Security](#) on page 58 and [Change Hotspot Web Page Login Settings](#) on page 62.

External Antennas

Using an external antenna might be recommended in areas of lower coverage to improve your device performance. MIMO Dual TS9 antennas are available from your retailer. Insert the connector carefully to avoid damage to your device.

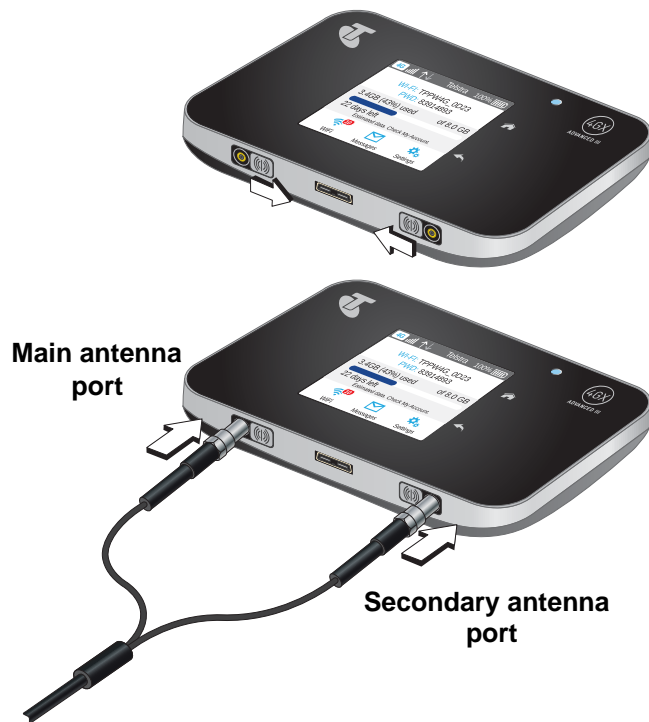


Figure 4. External antennas with TS-9 connectors

2 Use Your Mobile Hotspot

This chapter explains how to use your hotspot. The chapter covers the following topics:

- *View Data Usage*
- *Manage Wi-Fi*
- *Set Mobile Broadband Options*
- *View Messages*
- *Extend Battery Life*
- *Manage Hotspot Security*
- *View Details About Your Mobile Hotspot*
- *Update Mobile Hotspot Software and Firmware*

Note: To change settings, log in as an administrator. See *Hotspot Web Page* on page 12.

View Data Usage


You can view an estimate of your data usage on the hotspot web page and on the hotspot touch screen.

The plan data counter resets automatically when the next billing cycle starts, and the session data counter resets automatically for each session.

➤ **To view estimated data usage on the hotspot touch screen:**

1. To wake up the device, press the **Power** key.
2. Tap the **Home** (🏠) button.

The touch screen shows the estimated data usage for the current billing cycle.

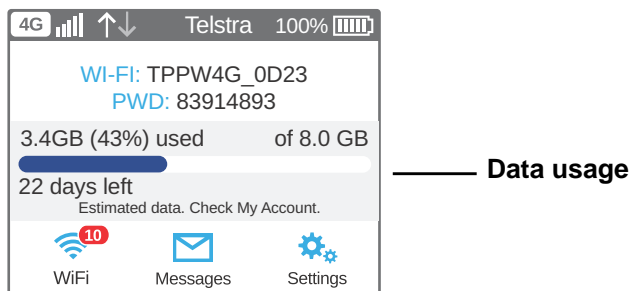

➤ **To view detailed data usage information on the hotspot web page:**


1. From a computer or wireless device that is connected to your network, launch an Internet browser.
2. Enter **http://m.home** or **http://192.168.1.1**.

A login page displays.

3. Enter the administrator login password.

The default password is **admin**. The password is case-sensitive.

The hotspot web page displays the data usage for the current billing cycle and for the current broadband session.

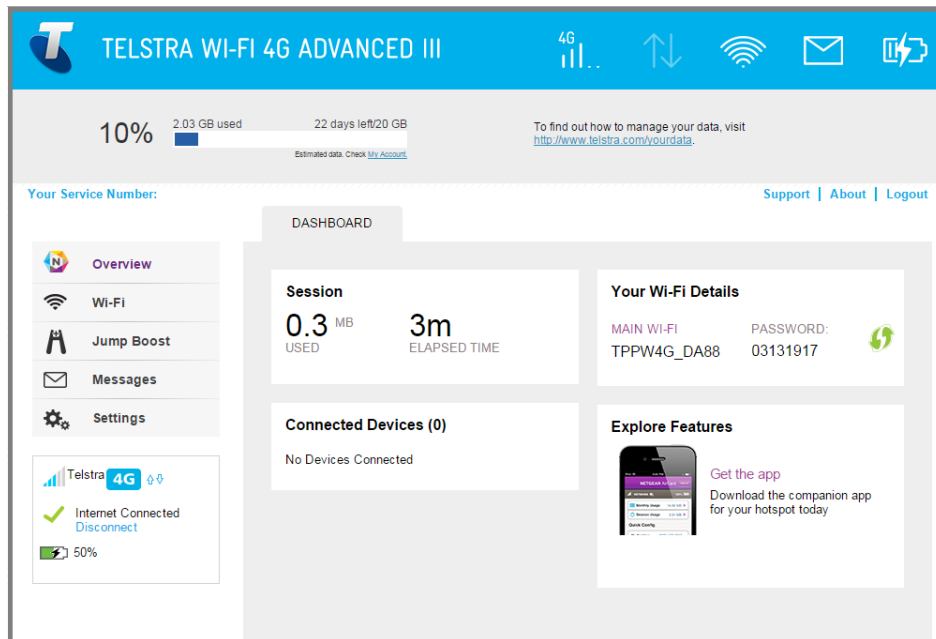

Manage Wi-Fi

Advanced users can set up the Wi-Fi radio of the hotspot to meet their Wi-Fi needs by customizing settings on the hotspot web page.

On the hotspot web page, the following Wi-Fi profiles are available:

- **Default, main Wi-Fi.** Share your main Wi-Fi with 2.4 GHz devices you trust.
- **5GHz Wi-Fi.** Share your main Wi-Fi with 5 GHz devices you trust.
- **Guest Wi-Fi.** Share your Wi-Fi with temporary visitors without exposing the 2.4 GHz devices on your main Wi-Fi network or letting visitors access the hotspot web page.
- **Dual-band Wi-Fi (2.4 GHz and 5 GHz).** Gives you the flexibility to connect 2.4 GHz and 5 GHz devices with your main Wi-Fi to transfer data at higher throughputs.

By default, main Wi-Fi is enabled and both dual-band Wi-Fi and guest Wi-Fi are disabled. If your place of business does not allow Wi-Fi or for any other reason you want to disable Wi-Fi and use the mobile hotspot only in tethered mode, the mobile hotspot gives you that option.

Note: Whenever you change Wi-Fi settings, any devices connected to the hotspot are disconnected and might need to be reconnected.

Specify the Wi-Fi Settings


From the touch screen, you can specify a number of Wi-Fi settings. For more detailed profile selections, visit the hotspot web page (<http://m.home> or <http://192.168.1.1>). You can establish any one of the following types of networks:

- **Default (No secondary network).** Main Wi-Fi only on the 2.4 GHz band. If you configured a custom profile using the hotspot web page, you can return to the default Wi-Fi setting.
- **5 GHz Wi-Fi.** Main Wi-Fi only on either the 2.4 GHz or 5 GHz band. Use this choice to transfer data at higher throughputs.
- **Guest Wi-Fi.** Main Wi-Fi and guest Wi-Fi on the 2.4 GHz band.


Note: Whenever you change Wi-Fi settings, any devices connected to the hotspot are disconnected and might need to be reconnected.

➤ To specify the Wi-Fi settings from the touch screen:


1. To wake up the device, press the **Power** key.
2. Tap the **Home** (🏠) button.

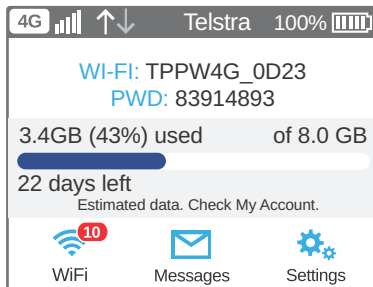


3. Tap the **Wi-Fi** button.

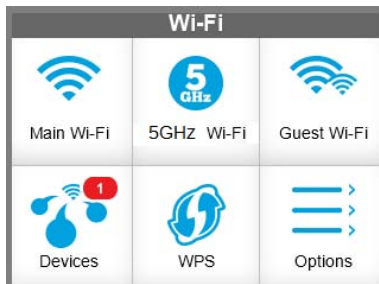

4. Tap the **Options** button.

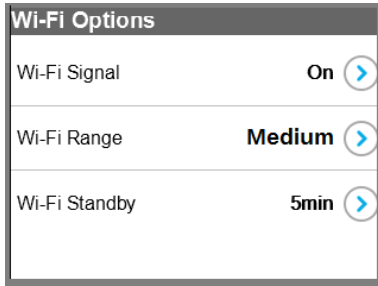


5. To disable the Wi-Fi signal in a restricted area, tap the > button next to Wi-Fi Signal.

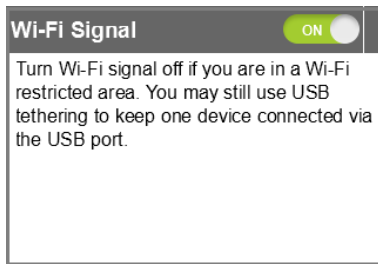

6. Slide the **ON** button to the **OFF** position.

Your setting is saved.


7. To set the Wi-Fi range, tap the > button next to Wi-Fi Range.

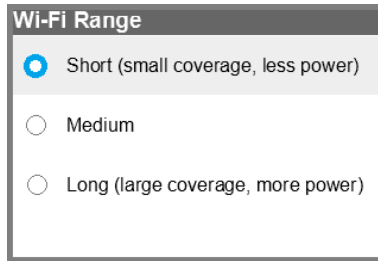

8. Tap the radio button for the selection that you want.

Your setting is saved.

9. To power down the Wi-Fi radio after a set period of inactivity, tap the > button next to Wi-Fi Standby.

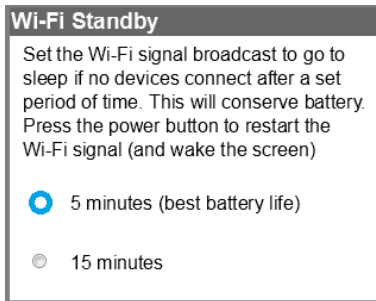

10. Tap the radio button for the selection that you want.

Your setting is saved.

Use the hotspot web page to set up a profile that is more detailed than the basic profiles offered on the touch screen.

➤ **To select a Wi-Fi profile or create a custom profile on the hotspot web page:**

1. From a computer or wireless device that is connected to your network, launch an Internet browser.
2. Enter **http://m.home** or **http://192.168.1.1**.

A login page displays.

3. Enter the administrator login password.

The default password is **admin**. The password is case-sensitive.

The Home page displays.

4. Select **Wi-Fi > Options**.

5. In the **Wi-Fi Profiles** menu, select a predefined profile or select **Custom Setup** to choose your own options.

The Wi-Fi Options page that displays depends on the Wi-Fi profile that is selected.

6. To modify the displayed profile (even if you selected a predefined profile), use the following options:
- **Secondary Wi-Fi.** Select the **Enable secondary Wi-Fi network** check box to use a secondary Wi-Fi network.
 - **Frequency.** Select the Wi-Fi frequency (2.4 GHz or 5 GHz) to use on the main, secondary, or both Wi-Fi networks.
 - **Guest mode.** Select the **Guest Wi-Fi** check box to use the secondary Wi-Fi network for temporary visitors.

The **Submit** button displays after you make a selection.

7. Click the **Submit** button.

Your changes are saved.

If you select a predefined profile and then change the frequency, or change the guest Wi-Fi options, the profile type changes automatically to **Custom Setup**.

Note: When you change your profile options (including disabling or enabling either Wi-Fi network), any devices connected to the hotspot are disconnected and might need to be reconnected.

Connect to Wi-Fi from Wireless Device

You can connect up to 15 wireless devices (such as smartphones, laptops, tablets, digital cameras, printers, gaming consoles, and digital picture frames) to your hotspot network. For information about setting connections for main Wi-Fi and guest Wi-Fi networks, see [Set the Maximum Number of Connected Devices](#) on page 29.

You can add a wireless device to your Wi-Fi network manually. If the device that you are adding is WPS enabled, you can use the WPS method to connect the device without using the Wi-Fi password.

Connect with the Wi-Fi Password

1. On the wireless device, view the list of available Wi-Fi networks.
2. Connect to the network that corresponds to your hotspot network as displayed on the touch screen.
3. When prompted, enter the Wi-Fi password for your hotspot network.


The Wi-Fi password displays on the hotspot touch screen. If the screen is turned off, press and quickly release the **Power** key to wake the hotspot.

Add a WPS-Enabled Device

You can add a WPS-enabled Wi-Fi device to your Wi-Fi network without a Wi-Fi password, using the hotspot web page or the touch screen.

➤ To add a WPS-enabled Wi-Fi device from the touch screen:


1. To wake up the device, press the **Power** key.
2. Tap the **Home** (🏠) button.

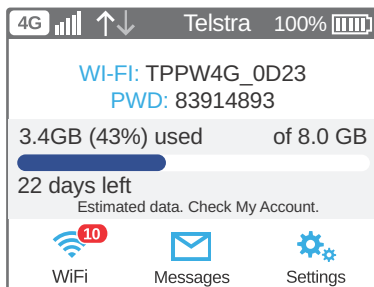


3. Tap the **Wi-Fi** button.



4. Tap the **WPS** button.

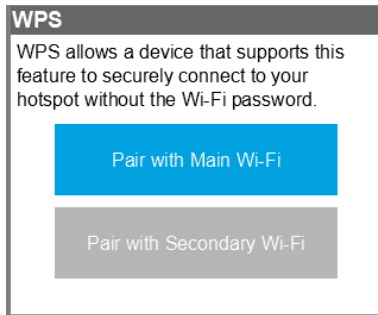



5. Tap the **Pair with Main Wi-Fi** or **Pair with Secondary Wi-Fi** button.

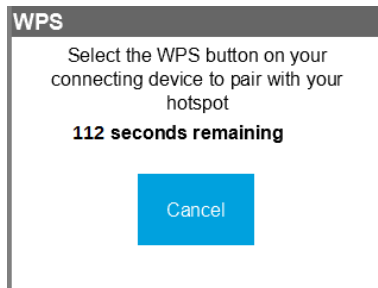

6. Within two minutes, press the **WPS** key on the wireless device that you want to connect. Your mobile hotspot and the wireless device communicate and establish the connection.

➤ **To add a WPS-enabled Wi-Fi device from the hotspot web page:**

1. From a computer or wireless device that is connected to your network, launch an Internet browser.
2. Enter **http://m.home** or **http://192.168.1.1**.
A login page displays.
3. Enter the administrator login password.
The default password is **admin**. The password is case-sensitive.
The Home page displays.

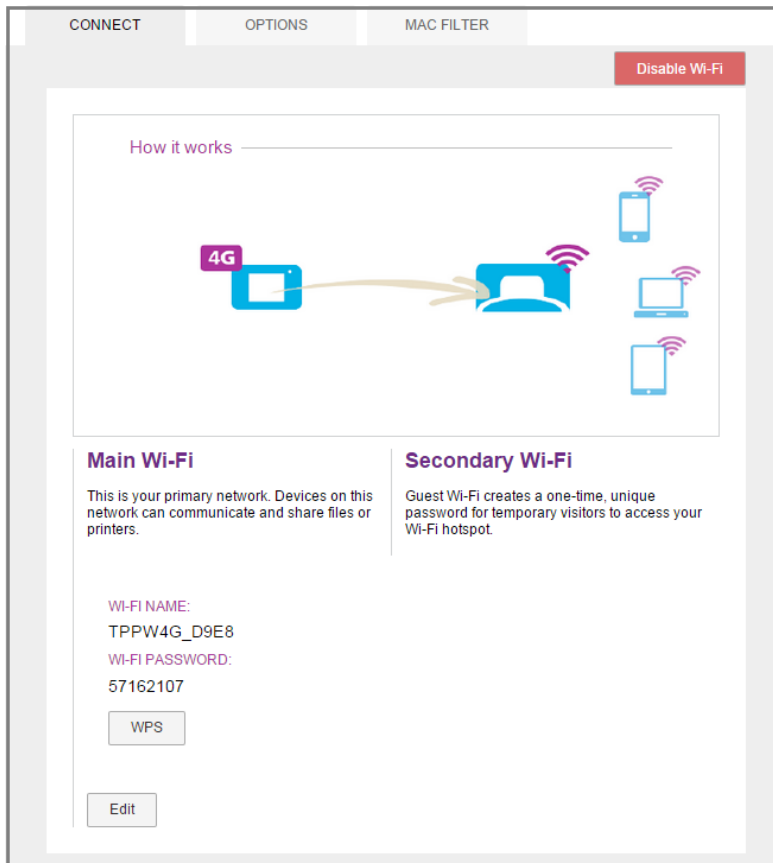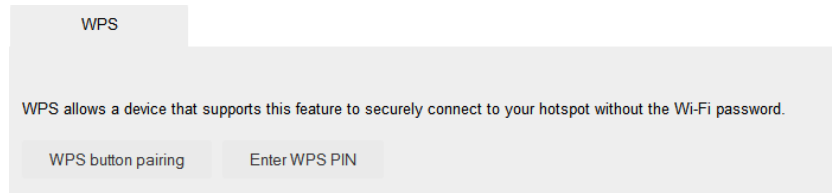4. Select **Wi-Fi > Connect**.5. Click the **WPS** button for either the main Wi-Fi or secondary Wi-Fi network (if available).

6. Choose the WPS method that you want to use:

- **WPS button pairing.** If the device you want to connect includes a WPS key, click the **WPS button pairing** button and, within two minutes (120 seconds), press the device's **WPS** key.
- **Enter WPS PIN.** If a WPS pin is associated with the device that you want to connect, click the **Enter WPS PIN** button and enter the device's WPS PIN.


Your hotspot and the wireless device communicate and establish the connection.

Enable Guest Wi-Fi


Guest Wi-Fi creates a one-time unique password for temporary visitors to access your Wi-Fi hotspot.

➤ To enable **Guest Wi-Fi** from the touch screen:


1. To wake up the device, press the **Power** key.
2. Tap the **Home** (🏠) button.

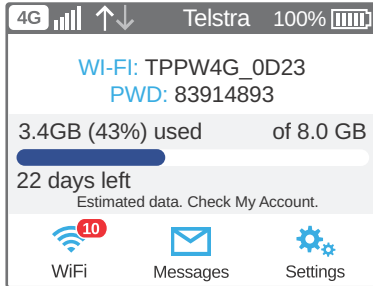

3. Tap the **Wi-Fi** button.

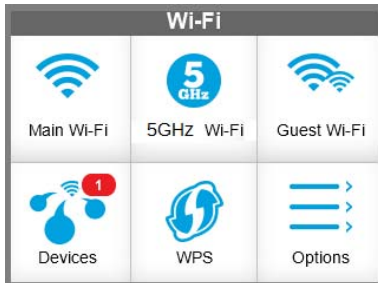


4. Tap the **Guest Wi-Fi** button.

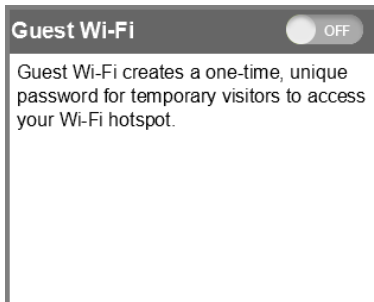



5. Slide the **OFF** button to the **ON** position.

Guest Wi-Fi is enabled.

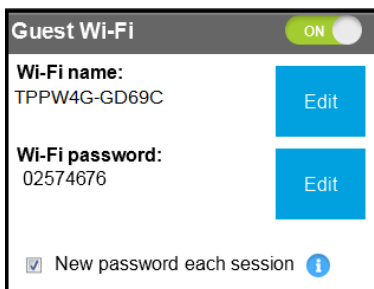

➤ **To enable guest Wi-Fi from the hotspot web page:**

1. From a computer or wireless device that is connected to your network, launch an Internet browser.
2. Enter **http://m.home** or **http://192.168.1.1**.
A login page displays.
3. Enter the administrator login password.
The default password is **admin**. The password is case-sensitive.
The Home page displays.
4. Select **Wi-Fi > Options**.
The **Wi-Fi Options** page displays.
5. In the **Wi-Fi Profiles** menu, select **Guest Wi-Fi**.

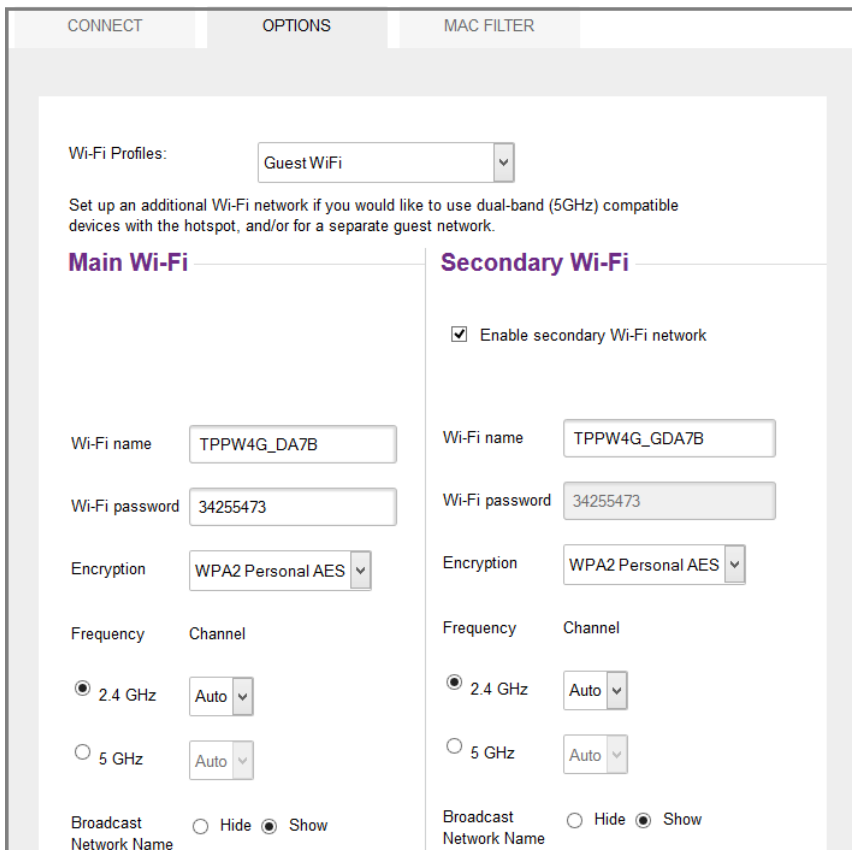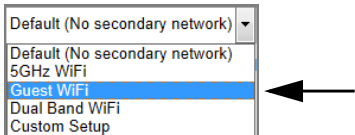

The **Submit** button displays near the bottom of the page after you make a selection.

Note: The default values are appropriate to support a guest network.


6. Click the **Submit** button.
Guest Wi-Fi is enabled.

Enable Dual-Band Wi-Fi

When all of your devices support 5 GHz Wi-Fi, use dual-band Wi-Fi for faster downloads. Dual-band Wi-Fi uses more power.

- **To enable dual-band Wi-Fi from the hotspot web page:**
 1. From a computer or wireless device that is connected to your network, launch an Internet browser.
 2. Enter **http://m.home** or **http://192.168.1.1**.
A login page displays.
 3. Enter the administrator login password.
The default password is **admin**. The password is case-sensitive.
The Home page displays.
 4. Select **Wi-Fi > Options**.
The Wi-Fi Options page displays.

- In the **Wi-Fi Profiles** menu, select **Dual-Band Wi-Fi**.

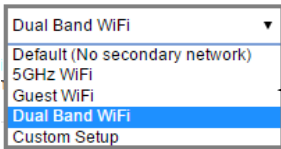

CONNECT
OPTIONS
MAC FILTER

Wi-Fi Profiles: Dual Band WiFi

Set up an additional Wi-Fi network if you would like to use dual-band (5GHz) compatible devices with the hotspot, and/or for a separate guest network.

Main Wi-Fi

Wi-Fi name:

Wi-Fi password:

Encryption: WPA2 Personal AES

Frequency: 2.4 GHz Auto

5 GHz Auto

Broadcast Network Name: Hide Show

Secondary Wi-Fi

Enable secondary Wi-Fi network

Wi-Fi name:

Wi-Fi password:

Encryption: WPA2 Personal AES

Frequency: 2.4 GHz Auto

5 GHz Auto

Broadcast Network Name: Hide Show

Guest Mode

Guest Wi-Fi

Guest Wi-Fi allows you to share your Wi-Fi with temporary visitors without exposing them to your devices on main Wi-Fi.

After you make a selection, the **Submit** button displays near the bottom of the page.

Note: The default values are appropriate for dual-band Wi-Fi.

- Click the **Submit** button.


Dual-band Wi-Fi is enabled.

Set the Maximum Number of Connected Devices


You can connect up to 15 wireless devices to the hotspot. These connections are shared between the hotspot's main and secondary Wi-Fi networks.

- **To set the number of devices that can connect to each Wi-Fi network from the touch screen:**


1. To wake up the device, press the **Power** key.
2. Tap the **Home** (🏠) button.

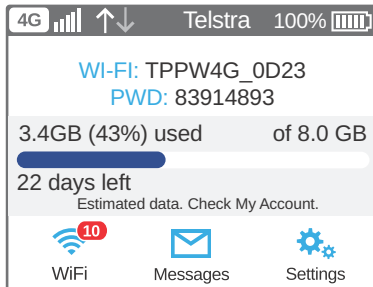


3. Tap the **Wi-Fi** button.

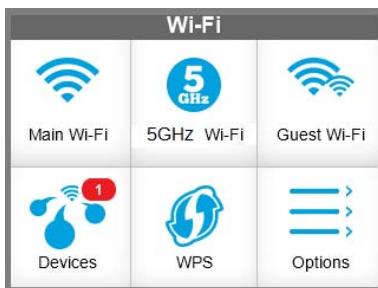

4. Tap the **Devices** button.

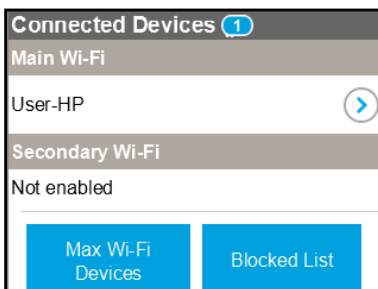

5. Tap the **Max Wi-Fi Devices** button.

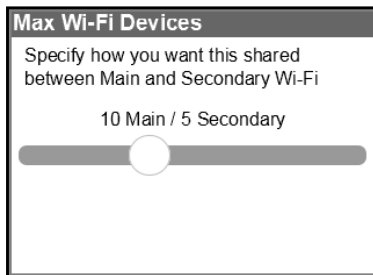

6. Slide the button to specify how you want the Wi-Fi devices to be shared between the Wi-Fi networks.
7. Tap the **Submit** button.

Your setting is saved.

➤ **To set the number of devices that can connect to each Wi-Fi network from the hotspot web page:**

1. From a computer or wireless device that is connected to your network, launch an Internet browser.
2. Enter **http://m.home** or **http://192.168.1.1**.

A login page displays.

3. Enter the administrator login password.

The default password is **admin**. The password is case-sensitive.

The Home page displays.

4. Select **Wi-Fi > Options**.

Wi-Fi Options

Max Wi-Fi: 15

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15

2.4 Ghz Bandwidth: 1z

5 Ghz Bandwidth: 1z

Wi-Fi Info on Home: 15 how

Hide

Wi-Fi Range: Short (small coverage, less power)
 Medium
 Long (large coverage, more power)

USB Tethering: Wi-Fi stays Off
 Wi-Fi stays On

Connection

RTS Threshold: 2347

Fragmentation Threshold: 2346

5. Near the bottom of the page, from the **Max Wi-Fi** menu, select the number of devices that are allowed to access your hotspot.
6. Click the < button or the > button to adjust the number of connections available on each of the Wi-Fi networks (main and secondary).

The **Submit** button displays after you make a selection.

7. Click the **Submit** button.

The number of devices that are allowed to access your hotspot is set.


View or Block Connected Users

You can view a list of devices that are connected to your hotspot and block undesired users.


Note: When you block or unblock users, the hotspot resets to activate the new settings. Any devices connected to the hotspot are disconnected when the hotspot resets.

➤ **To view the connected devices from the touch screen:**


1. To wake up the device, press the **Power** key.
2. Tap the **Home** (🏠) button.

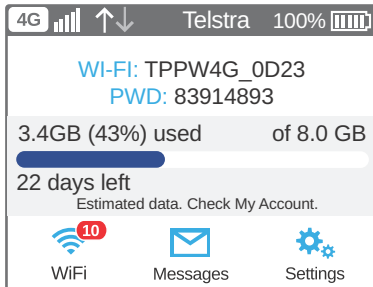

3. Tap the **Wi-Fi** button.

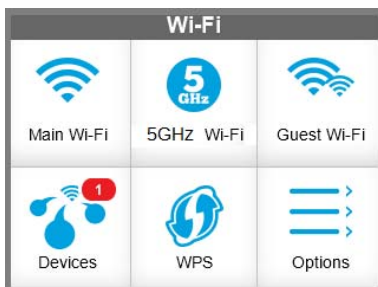

4. Tap the **Devices** button.

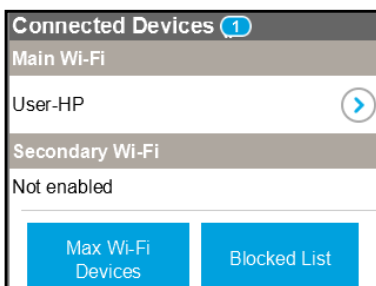


➤ **To view the connected devices from the hotspot web page:**

1. From a computer or wireless device that is connected to your network, launch an Internet browser.
2. Enter **http://m.home** or **http://192.168.1.1**.
A login page displays.

- 3. Enter the administrator login password.

The default password is **admin**. The password is case-sensitive.


A list of devices connected to the main Wi-Fi and guest Wi-Fi networks displays on the Home page.

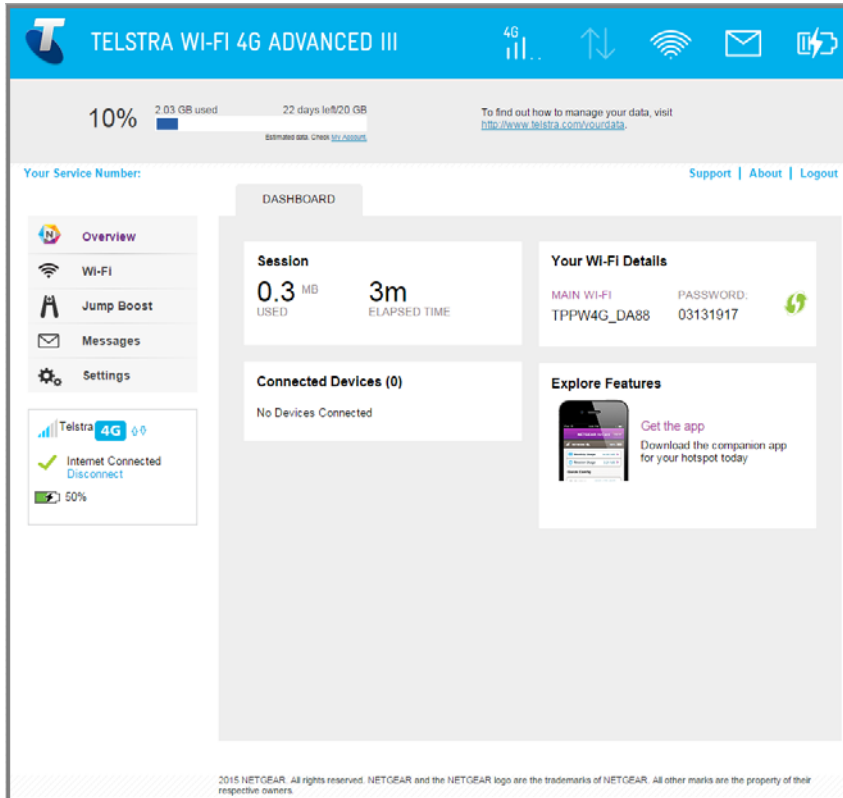


If you notice a Wi-Fi device that you do not recognize, you can block that device from connecting to your Wi-Fi network.

➤ **To block a device from the touch screen:**


- 1. To wake up the device, press the **Power** key.
- 2. Tap the **Home** (🏠) button.

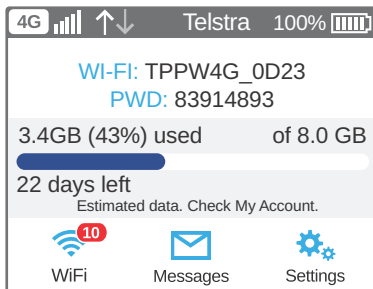


3. Tap the **Wi-Fi** button.

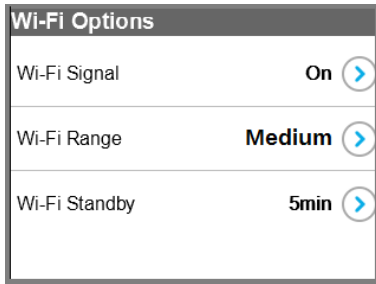


4. Tap the **Devices** button.

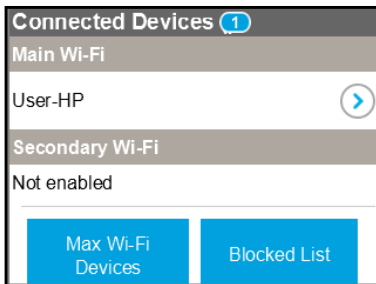

5. Tap the device.

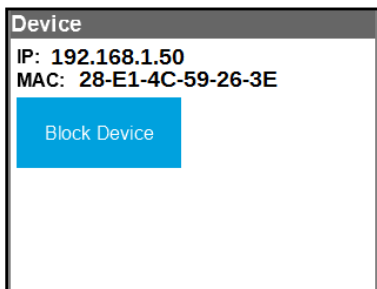

6. Tap the **Block Device** button.

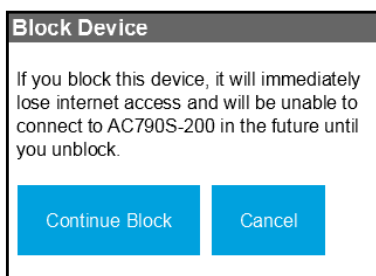

7. Tap the **Continue Block** button.

The device is blocked from your network.

➤ **To block a device from the hotspot web page:**

1. From a computer or wireless device that is connected to your network, launch an Internet browser.
2. Enter **http://m.home** or **http://192.168.1.1**.

A login page displays.


3. Enter the administrator login password.

The default password is **admin**. The password is case-sensitive.

The Home page displays.

A list of devices connected to the main Wi-Fi and guest Wi-Fi networks displays on the Home page.


4. Click the device name.

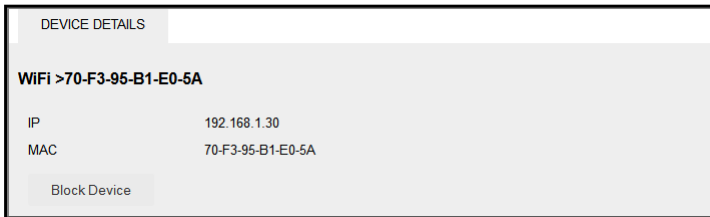


5. Click the **Block Device** button.
6. When prompted, click the **Block Device** button again.

➤ **To view a list of blocked devices from the touch screen:**


1. To wake up the device, press the **Power** key.
2. Tap the **Home** (🏠) button.

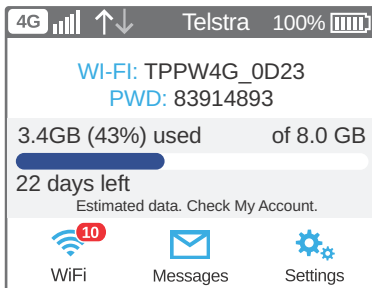


3. Tap the **Wi-Fi** button.

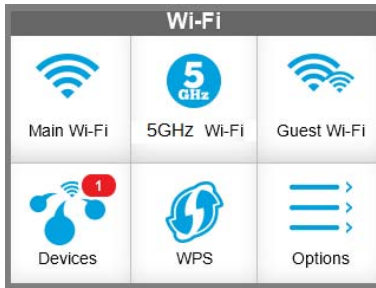

4. Tap the **Devices** button.

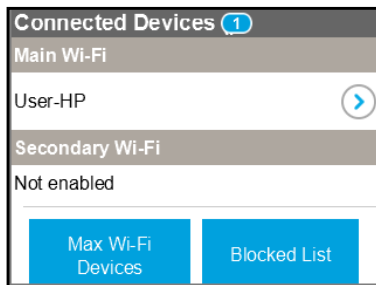

5. Tap the **Blocked List** button.

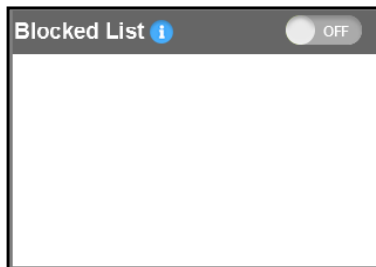


Note: Devices display when Blocked List feature is set to **ON**.


➤ **To view a list of blocked devices from the hotspot web page:**

1. From a computer or wireless device that is connected to your network, launch an Internet browser.
2. Enter **http://m.home** or **http://192.168.1.1**.
A login page displays.
3. Enter the administrator login password.
The default password is **admin**. The password is case-sensitive.
The Home page displays.

A list of devices connected to the main Wi-Fi and guest Wi-Fi networks displays in the right column of the page.




4. Select **Wi-Fi > Mac Filter**.

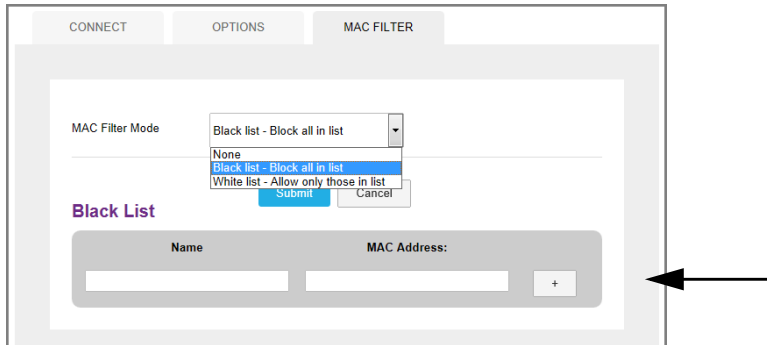


5. From the **MAC Filter Mode** menu, select **Black list - Block all in list**.
The list of blocked devices displays.

➤ **To unblock a device from the touch screen:**


1. To wake up the device, press the **Power** key.
2. Tap the **Home** (🏠) button.

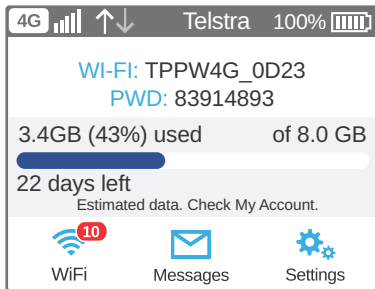


3. Tap the **Wi-Fi** button.

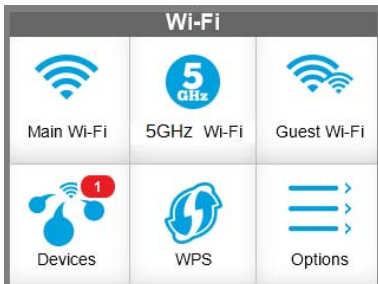

4. Tap the **Devices** button.

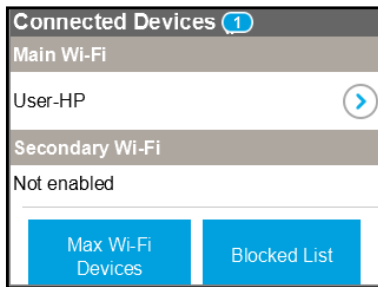


5. Tap the **Blocked List** button.

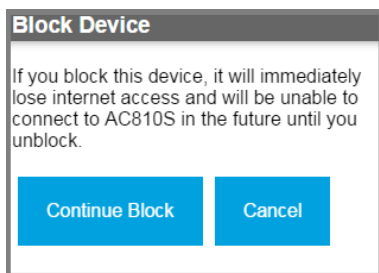

Note: Devices display when Blocked List feature is set to **ON**.

6. Tap the device.

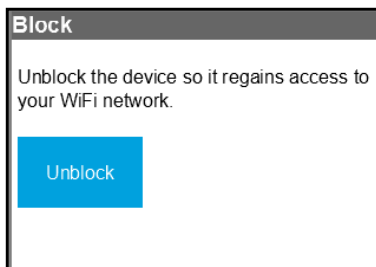

7. Tap the **Unblock** button.


The device can access your network.

➤ **To unblock a device from the hotspot web page:**

1. From a computer or wireless device that is connected to your network, launch an Internet browser.
2. Enter **http://m.home** or **http://192.168.1.1**.
A login page displays.
3. Enter the administrator login password.
The default password is **admin**. The password is case-sensitive.
The Home page displays.

A list of devices connected to the main Wi-Fi and guest Wi-Fi networks displays in the right column of the page.

4. Select **Wi-Fi > Mac Filter**.

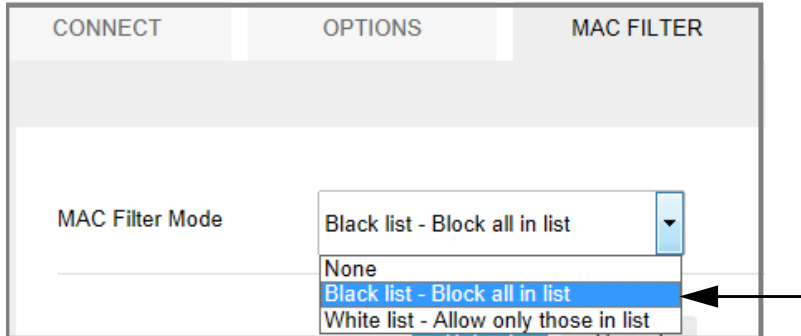


5. From the **MAC Filter Mode** menu, select **Black list - Block all in list**.
The list of blocked devices displays.
6. Click the **x** button next to a device.
The device can access your network.

Set Mobile Broadband Options


By default, the mobile hotspot automatically connects to your service provider's mobile broadband network. You can change this feature so that the mobile hotspot automatically connects to another network when you are roaming or never auto connects.

- **To set auto connect options from the touch screen:**


1. To wake up the device, press the **Power** key.
2. Tap the **Home** (🏠) button.

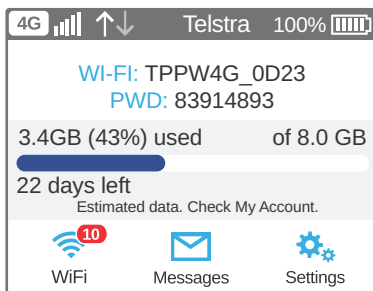


3. Tap the **Settings** button.

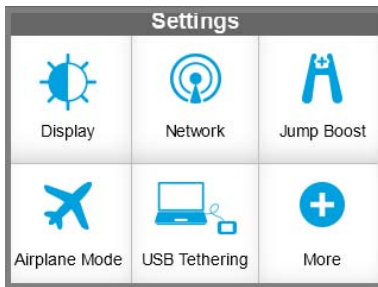


4. Tap the **Network** button.

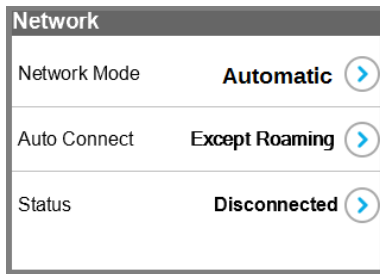

5. To set the network mode, tap the Network Mode > button.

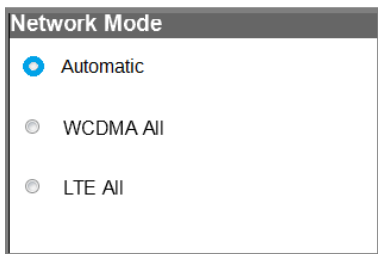

6. Tap the radio button for the selection that you want.
Your setting is saved.
7. Tap **x** to close the confirmation message window.

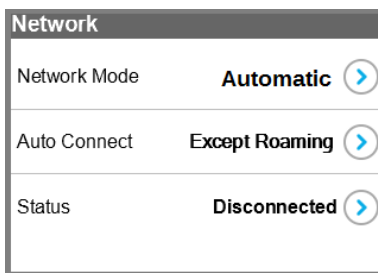

8. To set the auto connection method, tap the Auto Connect > button.
The Auto Connect screen displays.
9. Tap the radio button for the selection that you want.
Your setting is saved.

10. Tap **x** to close the confirmation message window.
11. Tap the **Home** (🏠) button.

The Home page displays.

➤ **To set auto connect options from the hotspot web page:**

1. From a computer or wireless device that is connected to your network, launch an Internet browser.
2. Enter **http://m.home** or **http://192.168.1.1**.


A login page displays.

3. Enter the administrator login password.

The default password is **admin**. The password is case-sensitive.

The Home page displays.

4. Select **Settings > Network > Preferences**.

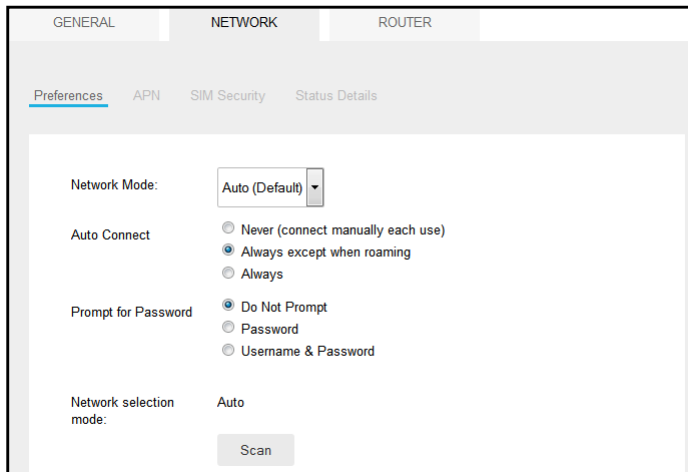

5. Select an Auto Connect option:

- **Never (connect manually each use).** The mobile hotspot does not attempt to automatically connect to the mobile broadband network when powered on.

To connect to the network manually, view the Mobile Broadband Disconnected alert and click the **Connect** button.

- **Always except when roaming.** The mobile hotspot automatically attempts to connect only to your network provider's mobile broadband network when powered on.
- **Always.** The mobile hotspot automatically attempts to connect to the mobile broadband network when powered on.

You might incur roaming charges if you are outside your network provider's coverage area.

Note: If SIM PIN security is enabled, you must enter the SIM PIN before the hotspot can establish a connection. See [Enable SIM Security](#) on page 74.

The **Submit** button displays after you change any of the displayed preferences.

6. Click the **Submit** button.


Your settings are saved.

View Messages


You can view messages from the touch screen or the hotspot web page.

- **To view SMS messages from the touch screen:**

1. To wake up the device, press the **Power** key.
2. Tap the **Home** (🏠) button.

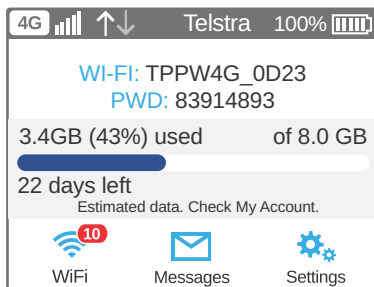

3. Tap the **Messages** button.

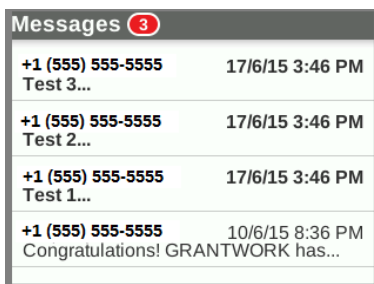

4. Tap the message to read the full text.

If you are logged in as an administrator, the Messages option on the side menu indicates unread network messages. You can view SMS messages from your network service provider on the hotspot web page.


- **To view SMS messages from the hotspot web page:**

1. From a computer or wireless device that is connected to your network, launch an Internet browser.


2. Enter **http://m.home** or **http://192.168.1.1**.
A login page displays.
3. Enter the administrator login password.
The default password is **admin**. The password is case-sensitive.
The Home page displays.
4. Select **Messages**.
A list of messages displays, showing the first portion of the text.
5. Click a message to read the full text.

➤ **To delete a message from the touch screen:**

1. To wake up the device, press the **Power** key.
2. Tap the **Home** (🏠) button.

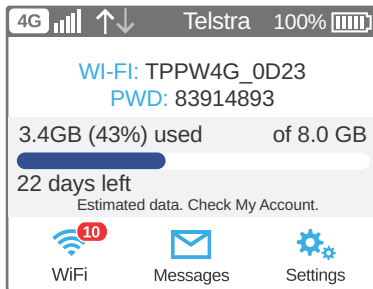

3. Tap the **Messages** button.

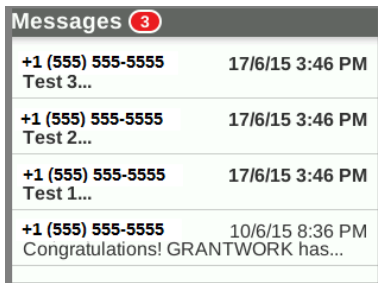

4. Tap the message.
5. Tap the **Delete** button.
The message is deleted.

➤ **To delete a message from the hotspot web page:**

1. From a computer or wireless device that is connected to your network, launch an Internet browser.
2. Enter **http://m.home** or **http://192.168.1.1**.
A login page displays.

3. Enter the administrator login password.
The default password is **admin**. The password is case-sensitive.
The Home page displays.
4. Select **Messaging**.
A list of messages displays, showing the first portion of the text.
5. Select the message and click the **Delete** button.
The message is deleted.


View Alerts

Your mobile hotspot displays alerts to advise you of device status changes. An Alert bar displays across the top of the screen. The color of the bar corresponds to the type of alert:

- **Red.** Critical alerts.
- **Amber.** Warning alerts.
- **Blue.** Web updates are available.
- **Yellow.** System alerts.

➤ To view alerts from the touch screen:

1. To wake up the device, press the **Power** key.
2. Tap the **Home** (🏠) button.

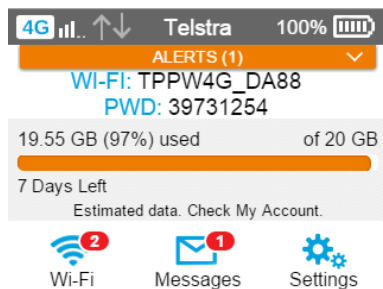

3. Tap the **Alerts** bar.
4. Read each alert that displays and follow any displayed instructions.
5. To return to the Home page, tap the **Home** (🏠) button.

Note: Alerts remain as long as the issues that cause them are active. When the issues are resolved, the alerts are removed automatically.

➤ **To view alerts from the hotspot web page:**


1. From a computer or wireless device that is connected to your network, launch an Internet browser.
2. Enter **http://m.home** or **http://192.168.1.1**.

A login page displays.

3. Enter the administrator login password.

The default password is **admin**. The password is case-sensitive.

Active alerts display at the top of the Home page.

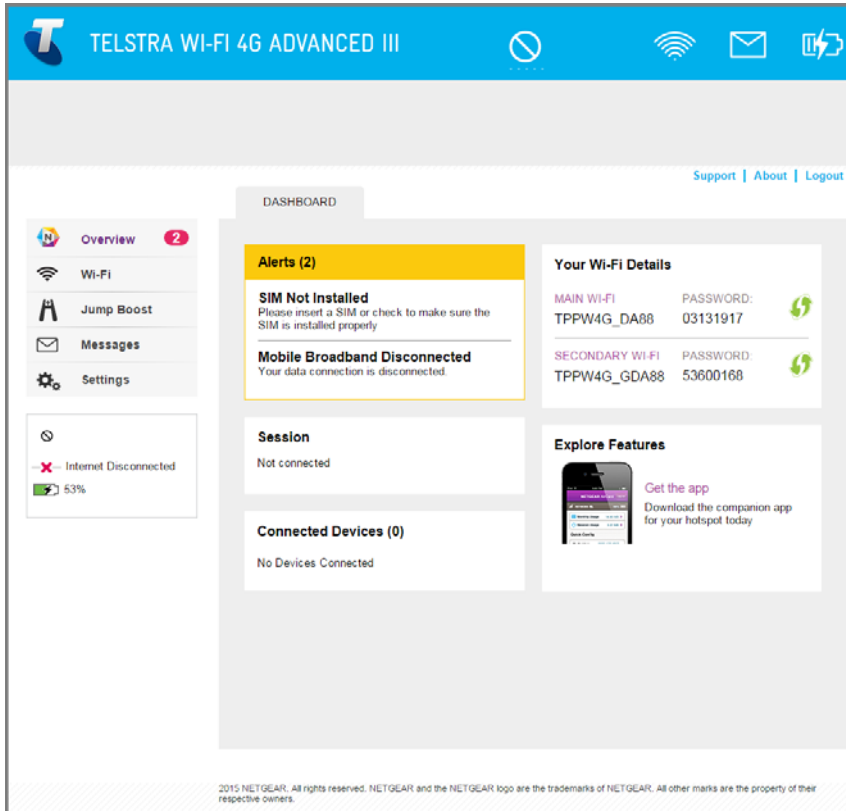

4. Follow the instructions in each alert to address the conditions that caused it to display.

Extend Battery Life

The mobile hotspot, by default, is configured to optimise battery life. The following factors affect battery life:

- Standby time.
- Data throughput.
- Mobile broadband signal strength (the better the signal, the longer the battery life).

- Wi-Fi range.
- Dual-band Wi-Fi (when all of your devices support 5 GHz Wi-Fi, dual-band Wi-Fi allows faster downloads but uses more power).
- Guest Wi-Fi, when enabled, uses more power.

To extend the battery life, use any of the following methods:

- Adjust Wi-Fi settings.
- Adjust display settings.
- Use tethered USB.
- Use airplane mode.


Adjust Wi-Fi Settings to Optimise Battery Life

If the devices that you are connecting to your Wi-Fi network are always close to your hotspot, shorten the Wi-Fi range. Set the standby timer to a shorter period to minimise the wait time when no devices are connected to either Wi-Fi network before going into standby mode (the Wi-Fi radio turns off).


Note: When you change the Wi-Fi settings, any devices connected to the hotspot are disconnected and might need to be reconnected.

➤ **To adjust Wi-Fi setting to optimise battery life from the touch screen:**


1. To wake up the device, press the **Power** key.
2. Tap the **Home** (🏠) button.

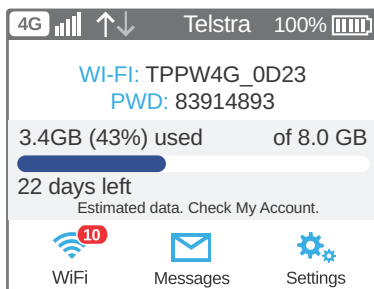


3. Tap the **Wi-Fi** button.

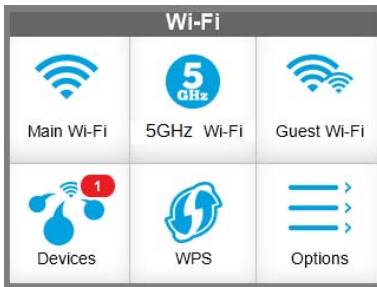


4. Tap the **Options** button.

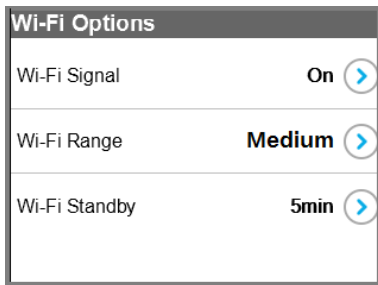

5. To disable the Wi-Fi signal when you are on a USB tether, tap the Wi-Fi Signal > button.

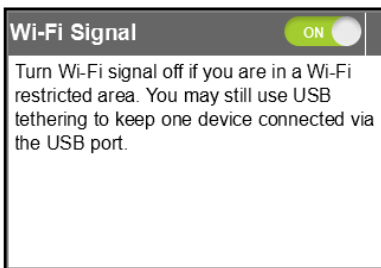

6. Slide the **ON** button to the **OFF** position.
Your setting is saved.
7. Tap the **x** button.
The WiFi Options screen displays.
8. To set the Wi-Fi range, tap the Wi-Fi Range > button.

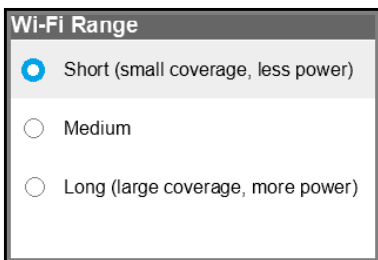


9. Tap the radio button for the selection that you want.

Your setting is saved.

10. Tap the **x** button.

The WiFi Options screen displays.

11. To power down the Wi-Fi radio after a set period of inactivity, tap the Wi-Fi Standby > button.

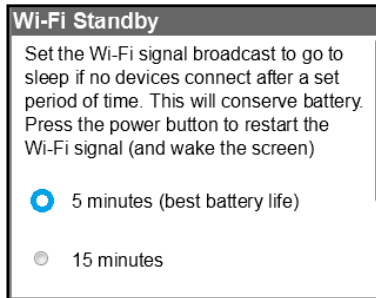

12. Tap the radio button for the selection that you want.

Your setting is saved.

Use the hotspot web page to set up a profile that is more detailed than the basic profiles offered on the touch screen.

➤ **To adjust Wi-Fi settings to optimise battery life from the hotspot web page:**

1. From a computer or wireless device that is connected to your network, launch an Internet browser.
2. Enter **http://m.home** or **http://192.168.1.1**.


A login page displays.

3. Enter the administrator login password.

The default password is **admin**. The password is case-sensitive.

The Home page displays.

4. Select **Wi-Fi > Options**.

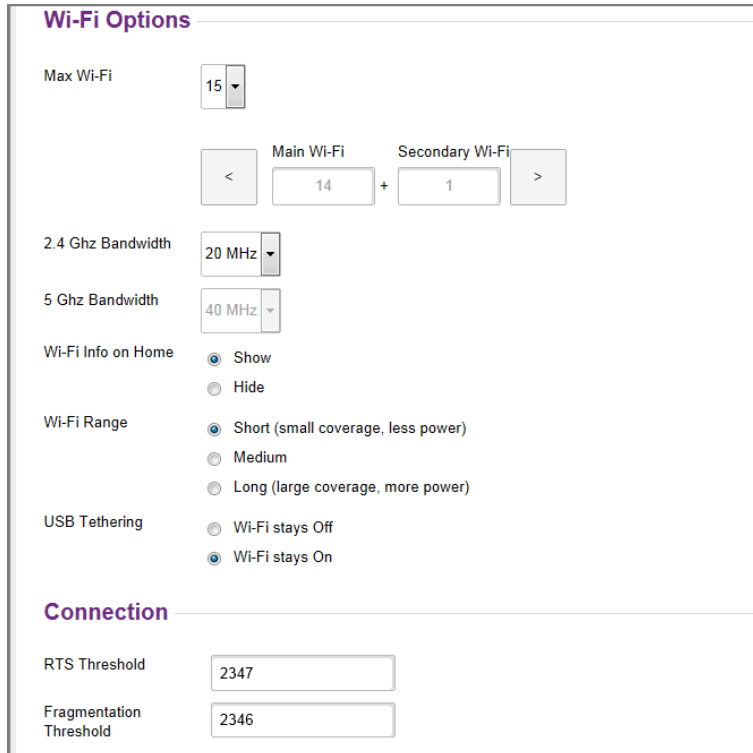

Wi-Fi Options

Max Wi-Fi: 15

Main Wi-Fi: 14 + Secondary Wi-Fi: 1

2.4 Ghz Bandwidth: 20 MHz

5 Ghz Bandwidth: 40 MHz

Wi-Fi Info on Home: Show Hide

Wi-Fi Range: Short (small coverage, less power) Medium Long (large coverage, more power)

USB Tethering: Wi-Fi stays Off Wi-Fi stays On

Connection

RTS Threshold: 2347

Fragmentation Threshold: 2346

5. Adjust any of these settings:

- **Wi-Fi Range:**
 - **Short** range provides the smallest coverage. However, battery life is longer.
 - **Medium** range provides moderate coverage and battery life.
 - **Long** range allows connected Wi-Fi devices to be farther from your mobile hotspot and still be connected to your Wi-Fi network, but battery life is shorter.
- **USB Tethering.** If you are tethering your hotspot to your device and do not want to use Wi-Fi for other devices, select the **Wi-Fi stays Off** radio button.

The **Submit** button displays after you make a selection.

6. Click the **Submit** button.

7. Select **Settings > General > Device**.

The screenshot shows the 'Device' settings page. The top bar includes 'Device' and 'Software and Reset'. The settings are organized into sections:

- Display:** 'Display Brightness' is set to 5.
- Screen Timeout:** 'Display Timeout', 'Timeout on AC', and 'Timeout on USB' are all set to '1 minute'.
- Hotspot LED:** 'LED' is set to 'On'.
- Sleep:** 'Wi-Fi Standby' is set to 'Never'.
- Homepage:** 'Host Name' is 'm', 'Domain Name' is 'home', and 'Password' is 'admin'.

8. From the **Wi-Fi Standby** menu, select a shorter time period.

The shorter the time, the longer the battery life.

The **Submit** button displays after you make a selection.

9. Click the **Submit** button.

Your settings are saved.


Adjust Display Settings to Increase Battery Life

Dim the screen to reduce the touch screen's brightness level. Set the screen time-out to a shorter period to reduce the amount of time to wait without the touch screen being touched before turning the screen blank.


➤ **To adjust display settings to increase battery life from the touch screen:**

1. To wake up the device, press the **Power** key.


2. Tap the **Home** (🏠) button.

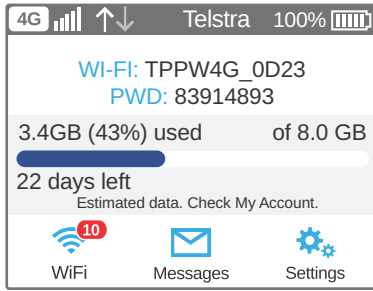


3. Tap the **Settings** button.

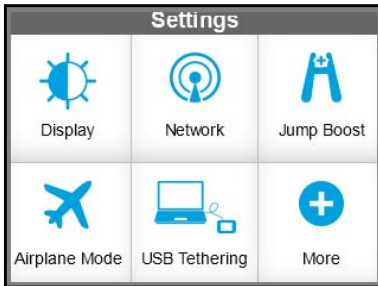

4. Tap the **Display** button.

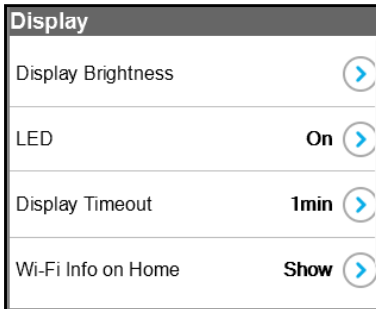


5. Tap the Display Brightness > button.

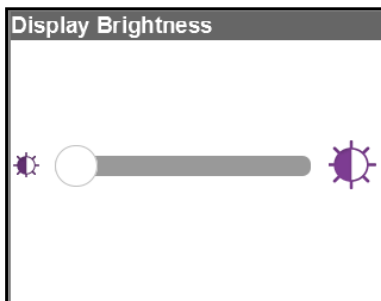


6. Slide the button to select the display brightness that you want.
Your setting is saved.

7. Tap the **Back** () button.

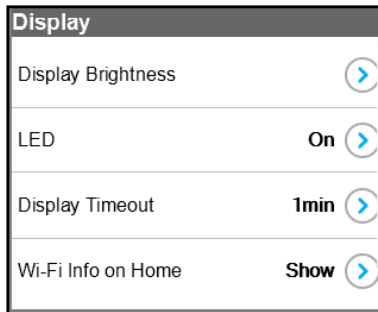

8. Tap the Display Timeout > button.

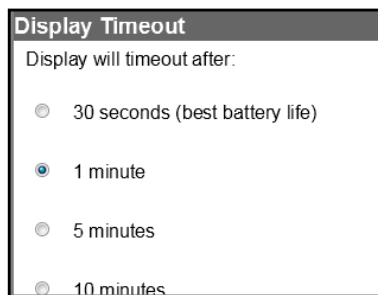

9. Tap the radio button for the selection that you want.

Your setting is saved.

➤ **To adjust display settings to increase battery life from the hotspot web page:**

1. From a computer or wireless device that is connected to your network, launch an Internet browser.
2. Enter **http://m.home** or **http://192.168.1.1**.
A login page displays.
3. Enter the administrator login password.
The default password is **admin**. The password is case-sensitive.
The Home page displays.

4. Select **Settings > General > Device**.

The screenshot shows the 'Device' settings page in the Telstra Wi-Fi 4GX Advanced III interface. The page is divided into several sections:

- Display:** Includes a 'Display Brightness' dropdown menu set to '5'.
- Screen Timeout:** Includes three dropdown menus: 'Display Timeout' (1 minute), 'Timeout on AC' (1 minute), and 'Timeout on USB' (1 minute).
- Hotspot LED:** Includes a radio button for 'LED' set to 'On'.
- Sleep:** Includes a dropdown menu for 'Wi-Fi Standby' set to '5 minutes (best battery life)'.
- Homepage:** Includes three text input fields: 'Host Name' (m), 'Domain Name' (home), and 'Password' (admin).

5. Adjust any of these settings:

- **Display Brightness.** From the menu, select the display brightness level.
- **Timeout on AC, Timeout on USB.** From the menus, select shorter time periods.

The **Submit** button displays after you make a selection.

6. Click the **Submit** button.

Your settings are saved.


Recharge the Battery

The battery comes partially charged. You can recharge the battery from a wall socket or from the USB port on your computer. Recharging from a wall socket is faster than recharging from a USB port.


Turn off USB tethering if you only want to charge your hotspot with your computer. For more information, see [USB Tethering](#) on page 55.


➤ **To recharge the battery from a wall socket:**

1. Attach one end of the micro USB cable to the connector on the right on the mobile hotspot and attach the other end to the wall charger (included).

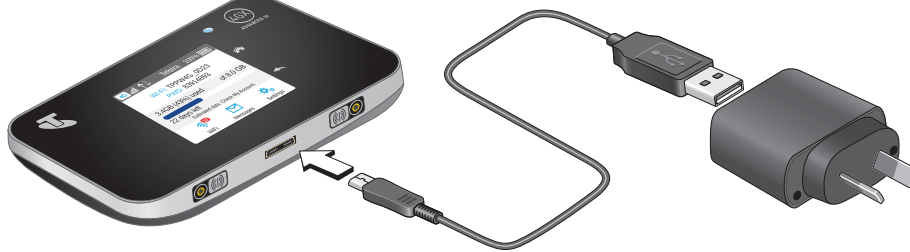

2. Plug the wall charger into a wall socket.


A lightning bolt appears on the Battery icon when the battery is charging ().


The Battery icon on the touch screen indicates when the battery is fully charged () and a notification displays.


Note: The battery continues to charge when the hotspot is powered off.

➤ **To recharge the battery from the USB port on your computer:**

1. Attach one end of the micro USB cable to the mobile hotspot and plug the other end into the USB port on your computer.

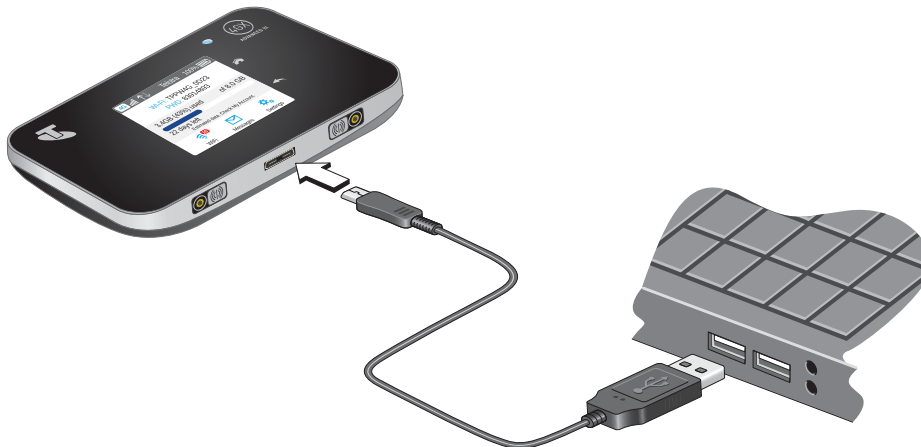

The Battery icon includes a lightning bolt to indicate that the battery is charging ().

The Battery icon on the touch screen indicates when the battery is fully charged () and a notification displays.

Note: The touch screen goes into sleep mode after a set time to extend battery life. To wake up the touch screen, press and quickly release the **Power** key.


USB Tethering

Use USB tethering to connect to the Internet from supported computers with a USB cable and charge the hotspot battery at the same time.


Turn off USB tethering if you only want to charge your hotspot with your computer.

➤ To enable USB tethering from the touch screen:


1. To wake up the device, press the **Power** key.
2. Tap the **Home** (🏠) button.

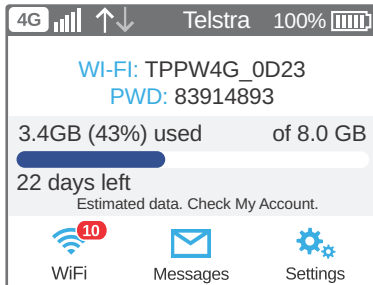

3. Tap the **Settings** button.

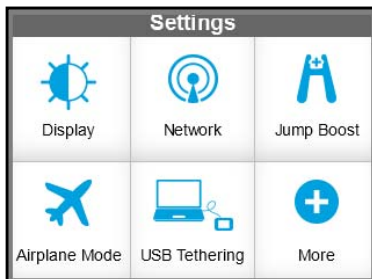

4. Tap the **USB Tethering** button.

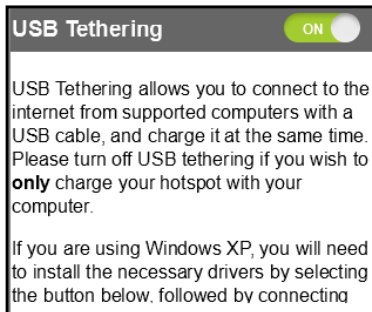


5. Slide the **OFF** button to the **ON** position.

USB tethering is enabled.

➤ **To connect the hotspot to the USB port on your computer:**

Attach one end of the micro USB cable to the mobile hotspot and plug the other end into the USB port on your computer.

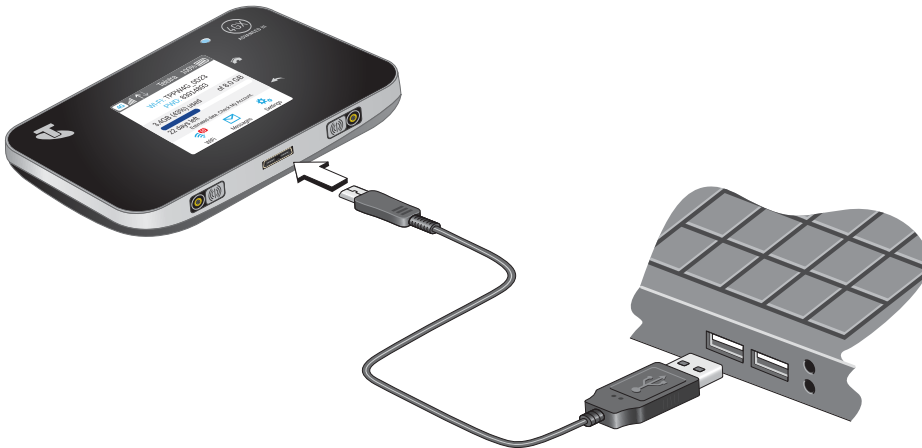


Enable Airplane Mode


Turn on airplane mode if you want to use jump boost while on an airplane or in areas where Wi-Fi is restricted.

➤ **To enable airplane mode from the touch screen:**


1. To wake up the device, press the **Power** key.
2. Tap the **Home** (🏠) button.

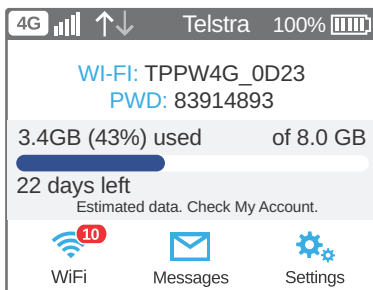

3. Tap the **Settings** button.

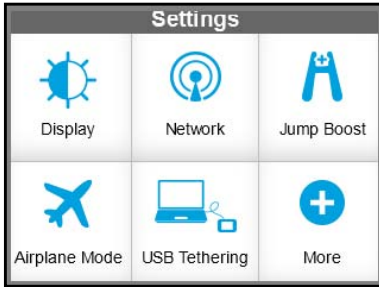

4. Tap the **Airplane Mode** button.

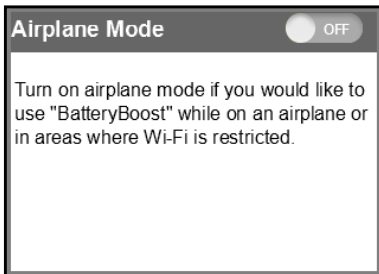

5. Slide the **OFF** button to the **ON** position.
Airplane mode is enabled.

➤ **To enable airplane mode from the hotspot web page:**


1. From a computer or wireless device that is connected to your network, launch an Internet browser.
2. Enter **http://m.home** or **http://192.168.1.1**.
A login page displays.
3. Enter the administrator login password.
The default password is **admin**. The password is case-sensitive.
The Home page displays.

4. Click the **Jump Boost** button.


Jump Boost

If your tablet or smartphone is out of battery, you can give it some juice from your hotspot. Reminder: you can't charge while boosting.


1. Connect the Jump Boost cable to the mobile hotspot's charging port. To ensure proper battery performance and charging, you must use the Jump Boost cable included in the box.

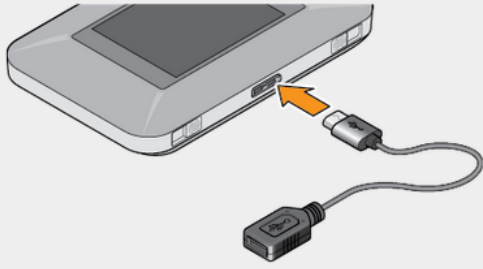

2. Connect your smartphone's charging cable to the Jump Boost connector.

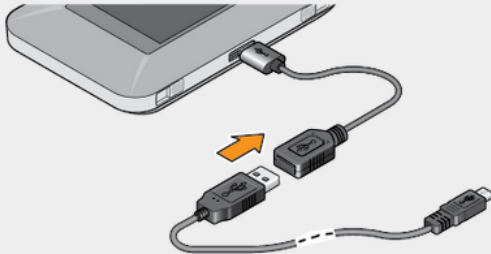

3. Connect your smartphone to the charging cable.

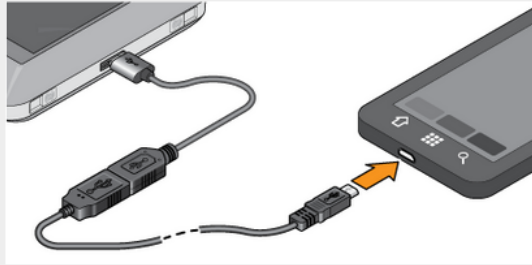

4. Choose how long you want to enable boost for. The timer starts immediately after you press the button below.

30 minute boost 60 minute boost 90 minute boost

Optional: Enable airplane mode if you would like to charge your device while in airplane

Enable Airplane Mode

5. Click the **Enable Airplane Mode** button.

Airplane mode is enabled.

Manage Hotspot Security

The following topics are covered in this section:

- *Change Network Names and Passwords* on page 59

- [Change Hotspot Web Page Login Settings](#) on page 62
- [Change Device Encryption Security Settings](#) on page 64

You can also block undesired hotspot users. For more information, see [View or Block Connected Users](#) on page 31.

Note: When you change the Wi-Fi settings, the hotspot resets. Any devices connected to the hotspot are disconnected when the hotspot resets.

Change Network Names and Passwords


The main and guest Wi-Fi network names identify your Wi-Fi networks and are visible to other Wi-Fi-enabled devices.

The procedure to change the main and guest Wi-Fi network names and passwords is the same. The following settings differ:


- **Main Wi-Fi.** For added security, you can prevent the main Wi-Fi network name and password from displaying on the touch screen home screen.
- **Guest Wi-Fi.** For added security, you can specify the guest Wi-Fi password changes each time you enable guest Wi-Fi.

➤ To change network names and passwords from the touch screen:


1. To wake up the device, press the **Power** key.
2. Tap the **Home** (🏠) button.

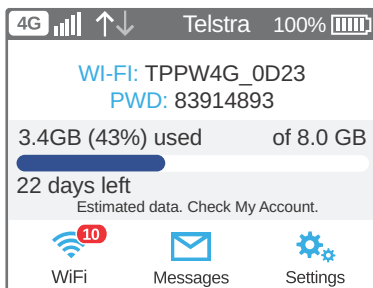


3. Tap the **Wi-Fi** button.

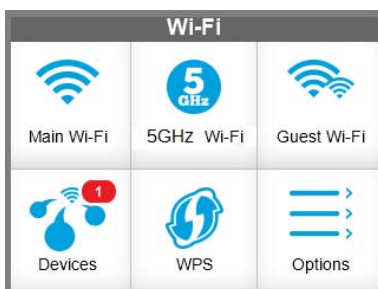

- To change the network name and password for main Wi-Fi, tap the **Main Wi-Fi** button.

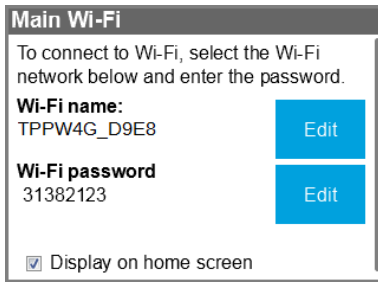

- To change the network name and password for guest Wi-Fi, tap the **Guest Wi-Fi** button.

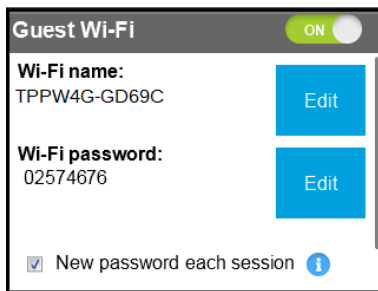

- To change the Wi-Fi name, tap the **Edit** button that is next to Wi-Fi name.
A warning message displays.
- Tap the **Continue** button.
The Wi-Fi name displays.
- Enter the new Wi-Fi name.
- Tap the **Done** button.
Your setting is saved.
The Main Wi-Fi screen displays.
- To change the Wi-Fi password, tap the **Edit** button that is next to Wi-Fi password.
A warning message displays.
- Tap the **Continue** button.
The Wi-Fi password displays.
- Enter the new Wi-Fi password.
- Tap the **Done** button.
Your setting is saved.
The Main Wi-Fi screen displays.
- For main Wi-Fi, to prevent the Wi-Fi name and password from displaying on the touch screen home screen, clear the **Display on home screen** check box.
Your setting is saved.

15. For guest Wi-Fi, to change the password each time you enable guest Wi-Fi, select the **New password each session** check box.

When this option is selected, the password entered in step 12 remains only for the current session.

Your setting is saved.

➤ **To change network names and passwords from the hotspot web page:**

1. From a computer or wireless device that is connected to your network, launch an Internet browser.
2. Enter **http://m.home** or **http://192.168.1.1**.


A login page displays.

3. Enter the administrator login password.

The default password is **admin**. The password is case-sensitive.

The Home page displays.

4. Select **Wi-Fi > Connect**.

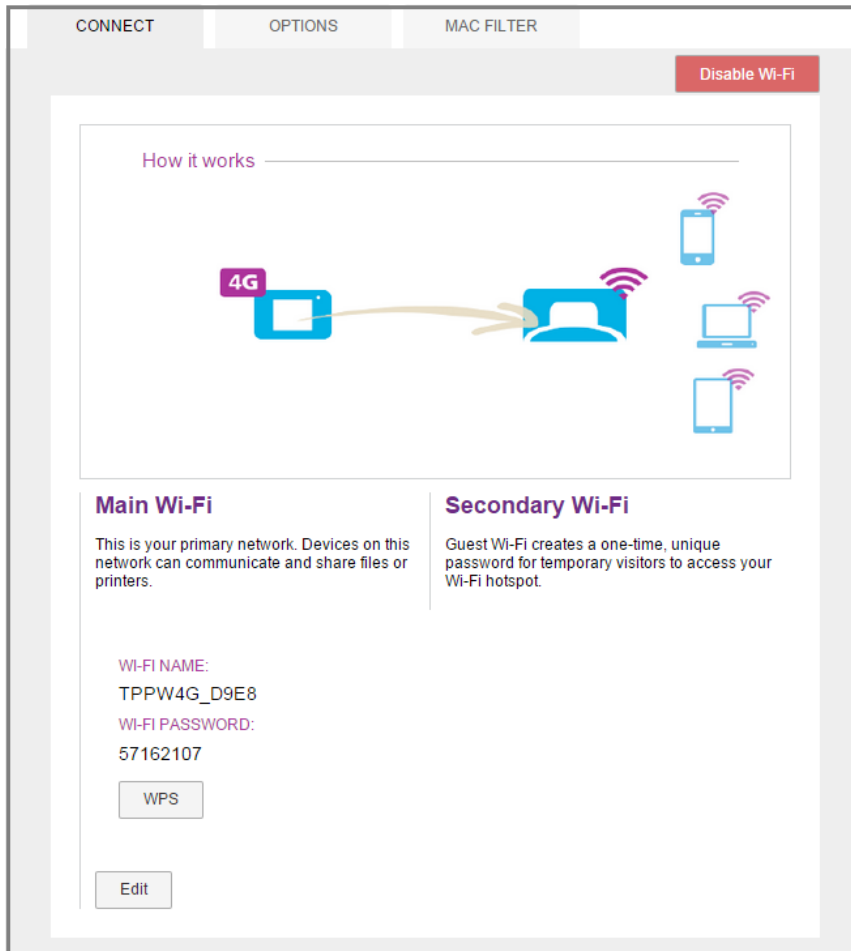

5. Click the **Edit** button.

The Wi-Fi Options page that displays depends on the Wi-Fi profile that is selected.

The screenshot shows the 'Wi-Fi Options' page with three tabs: 'CONNECT', 'OPTIONS', and 'MAC FILTER'. The 'Dual Band WiFi' profile is selected. Below the tabs, there is a section for 'Wi-Fi Profiles' with a dropdown menu set to 'Dual Band WiFi'. A note states: 'Set up an additional Wi-Fi network if you would like to use dual-band (5GHz) compatible devices with the hotspot, and/or for a separate guest network.' The page is divided into two main sections: 'Main Wi-Fi' and 'Secondary Wi-Fi'. Both sections have fields for 'Wi-Fi name' (TPPW4G_D9E8) and 'Wi-Fi password' (57162107). The 'Encryption' is set to 'WPA2 Personal AES'. Under 'Frequency', there are radio buttons for '2.4 GHz' and '5 GHz', each with an 'Auto' dropdown menu. The 'Broadcast Network Name' is set to 'Show'. In the 'Secondary Wi-Fi' section, the 'Enable secondary Wi-Fi network' checkbox is checked. At the bottom, there is a 'Guest Mode' section with a 'Guest Wi-Fi' checkbox and a note: 'Guest Wi-Fi allows you to share your Wi-Fi with temporary visitors without exposing them to your devices on main Wi-Fi.'

6. In the Main Wi-Fi and Secondary Wi-Fi sections, change the **Wi-Fi Name** and **Wi-Fi Password** fields as desired.
7. To create a new guest password each time you power on the hotspot, select the **Generate a new password each time I turn on the Guest Wi-Fi** check box.
8. Click the **Submit** button.
9. When prompted, click the **Submit** button again.

All devices that were connected must reconnect with the new name and password.

Change Hotspot Web Page Login Settings

You can change the host name for the hotspot web page. You can also change the password to access the hotspot web page.

- **To change the login settings for the hotspot web page:**
 1. From a computer or wireless device that is connected to your network, launch an Internet browser.
 2. Enter **http://m.home** or **http://192.168.1.1**.

A login page displays.

3. Enter the administrator login password.
The default password is **admin**. The password is case-sensitive.
The Home page displays.
4. Select **Settings > General > Device**.

The screenshot shows the 'Device' settings page in the Telstra Wi-Fi 4GX Advanced III interface. The page is organized into several sections:

- Display:** Includes a 'Display Brightness' dropdown menu set to '5'.
- Screen Timeout:** Includes three dropdown menus for 'Display Timeout', 'Timeout on AC', and 'Timeout on USB', all set to '1 minute'.
- Hotspot LED:** Includes a radio button selection for 'LED', with 'On' selected.
- Sleep:** Includes a dropdown menu for 'Wi-Fi Standby' set to '5 minutes (best battery life)'.
- Homepage:** Includes three text input fields: 'Host Name' (containing 'm'), 'Domain Name' (containing 'home'), and 'Password' (containing 'admin').

5. (Optional) In the **Host Name** field, change the host name used to access the hotspot web page.
Enter a maximum of 31 characters.
6. (Optional) In the **Password** field, change the password used to log in as an administrator.
Best practice is to set a more secure password.
Enter a maximum of 31 characters.
The the **Submit** button displays after you make a selection.
7. Click the **Submit** button.
Your settings are saved.

Change Device Encryption Security Settings

- **To change the type of security used for main and secondary or guest Wi-Fi:**
1. From a computer or wireless device that is connected to your network, launch an Internet browser.
 2. Enter **http://m.home** or **http://192.168.1.1**.
A login page displays.
 3. Enter the administrator login password.
The default password is **admin**. The password is case-sensitive.
The Home page displays.
 4. Select **Wi-Fi > Options**.
The Wi-Fi Options page that displays depends on the Wi-Fi profile that is selected.

The screenshot shows the 'OPTIONS' tab of the Telstra Wi-Fi configuration interface. It is divided into two columns: 'Main Wi-Fi' and 'Secondary Wi-Fi'. The 'Main Wi-Fi' section has the following settings: Wi-Fi name 'TPPW4G_DA88', Wi-Fi password '03131917', Encryption 'WPA2 Personal AES', Frequency '2.4 GHz', and Channel 'Auto'. The 'Secondary Wi-Fi' section has: 'Enable secondary Wi-Fi network' unchecked, Wi-Fi name 'TPPW4G_GDA88', Wi-Fi password '39731254', Encryption 'WPA2 Personal AES', Frequency '5 GHz', and Channel 'Auto'. A dropdown menu for the 'Encryption' field in the 'Main Wi-Fi' section is open, showing the following options: 'WPA2 Personal AES' (selected), 'None', 'WPA2 Personal AES', and 'WPA/WPA2'. An arrow points from the 'Encryption' dropdown in the 'Main Wi-Fi' section to the expanded dropdown menu.

5. In the **Encryption** menu for main Wi-Fi or guest Wi-Fi, select a security option:
 - **WPA2 Personal AES**. Strong security supported by newer Wi-Fi devices, the default.

- **WPA/WPA2.** Strong security supported by most Wi-Fi devices. Use WPA2 Personal AES whenever possible.
- **None.** Anyone can access your Wi-Fi network without a password and you are responsible for charges incurred. *Best practice is not to select this option.*

The **Submit** button displays after you make a selection.

6. Click the **Submit** button.

Your settings are saved.

7. Reconnect your Wi-Fi devices, if necessary, using the new Wi-Fi credentials.


See [Connect to the Internet](#) on page 10.

View Details About Your Mobile Hotspot


You can view details about your device such as the model number, software version, and IMEI (International Mobile Station Equipment Identity).

- **To view details about your device from the touch screen:**


1. To wake up the device, press the **Power** key.
2. Tap the **Home** (🏠) button.

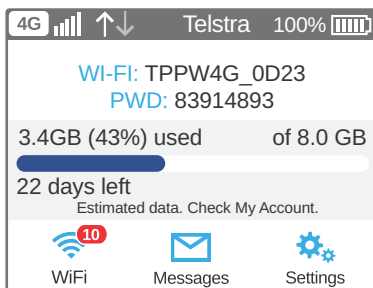

3. Tap the **Settings** button.

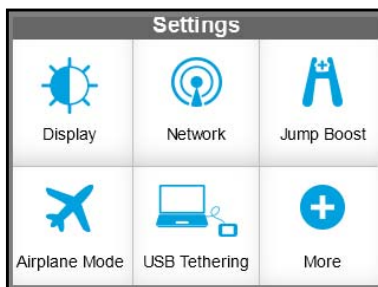

4. Tap the **More** button.

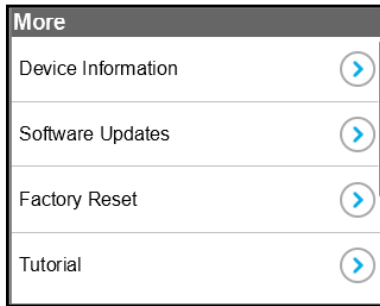

5. Tap the Device Information > button.



➤ **To view details about your device from the hotspot web page:**

1. From a computer or wireless device that is connected to your network, launch an Internet browser.
2. Enter **http://m.home** or **http://192.168.1.1**.
A login page displays.
3. Enter the administrator login password.
The default password is **admin**. The password is case-sensitive.
The Home page displays.

4. Click the **About** link.

The screenshot shows the 'ABOUT' page of the Telstra Wi-Fi 4GX Advanced III interface. The page is organized into several sections:

- Account Details:**
 - Wireless number:
 - IMEI: 351588070001085
 - IMEI SV: 00
 - IMSI: N/A
 - ICCID: N/A
- Device:**
 - Model: AirCard 810S
 - AC810S Manager: http://m.home
 - PRI Version: 1266601, 01.01
 - Power State: Online
 - Current temperature: 26°C
 - Current voltage: 4311mV
 - Battery charge level: 100%
 - Battery status: Normal
 - Battery temperature: 27°C
- Wi-Fi Details:**
 - MAC Address: 04-A1-51-FE-D9-E8
 - Wi-Fi Range: Medium
 - Main Wi-Fi:**
 - Name: TPPW4G_D9E8
 - Password: 57162107
 - Encryption: WPA2_Personal_AES
 - Mode: M802_11_BGN
 - Band: 2.4 GHz
 - Bandwidth: 20 MHz
 - Devices: 0 / 10
 - Broadcast Network Name: Show
- WWAN Info:**
 - IP Address: 0.0.0.0
- Firmware:**
 - Firmware Version: NTG9X40C_10.02.05.00
 - Firmware Build Date: 2015/05/19
 - Web App Version: AC810S-1TLAUS_03.03.102.03
 - Bootloader Version: NTG9X40C_10.02.05.00
 - Hardware Version: 0.2
 - TRU-Install: PHS_TELSTRA_B4059
- Network Status:**
 - [View Details](#)
- Open Source:**
 - [View Credits & Licenses](#)

At the bottom left, there is a 'Save to File' button. At the top right, there are links for 'Support', 'About', and 'Logout'.


Update Mobile Hotspot Software and Firmware

The hotspot automatically checks for new software or firmware updates once a week. If an update becomes available, the hotspot displays an alert. Open the alert and click the **Download** button. When the download completes, the hotspot displays an alert with an **Install now** button. Click the **Install now** button to install the update. Your device reboots automatically to use the new software.


You can also check for updates manually without receiving an alert.

➤ **To update software from the touch screen:**


1. To wake up the device, press the **Power** key.
2. Tap the **Home** (🏠) button.

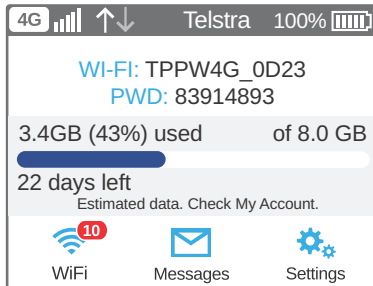


3. Tap the **Settings** button.

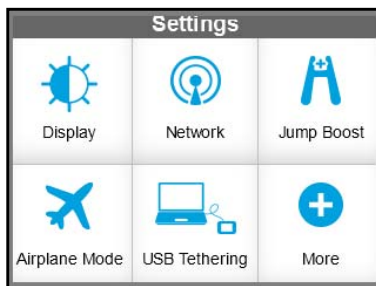

4. Tap the **More** button.

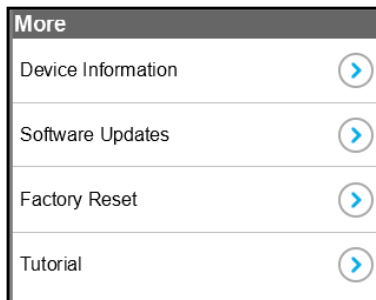

5. Tap the **Software Updates >** button.

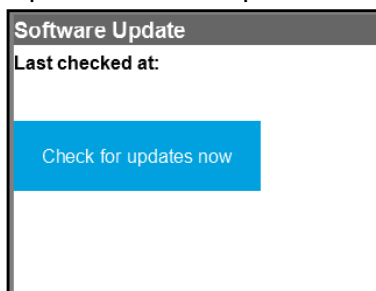


6. Tap the **Check for updates now** button.

7. If an update is available, tap the **Start Download** button.
The update downloads.
8. Tap the **Update now** button to install the update.
After the update install completes, the hotspot reboots.

➤ **To update software from the hotspot web page:**

1. From a computer or wireless device that is connected to your network, launch an Internet browser.
2. Enter **http://m.home** or **http://192.168.1.1**.
A login page displays.
3. Enter the administrator login password.
The default password is **admin**. The password is case-sensitive.
The Home page displays.
4. Select **Settings > General > Software and Reset**.

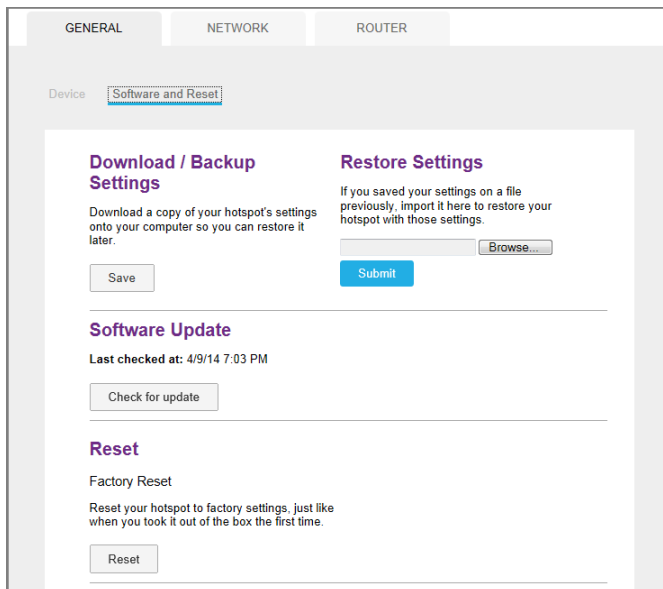

5. If the **Check for update** button displays, click it to see if a new update is available.
6. If an update is available, click the **Start Download** button.
The update downloads.
7. Click the **Update now** button to install the update.
After the update install completes, the hotspot reboots.

3. Advanced Settings

3

This chapter provides information about how to configure various aspects of the hotspot such as Wi-Fi settings, WAN settings, and router settings. The chapter covers the following topics:

- *Back Up and Restore Hotspot Settings*
- *Manage Wi-Fi Network Options*
- *Enable SIM Security*
- *Configure Mobile Broadband*

Back Up and Restore Hotspot Settings

You can back up and restore hotspot settings. Backing up and restoring is useful if you use more than one device and you want the same settings on all of your devices. You can also save your settings before resetting to factory defaults or changing the settings.

➤ To back up hotspot settings:

1. From a computer or wireless device that is connected to your network, launch an Internet browser.
2. Enter **http://m.home** or **http://192.168.1.1**.


A login page displays.

3. Enter the administrator login password.

The default password is **admin**. The password is case-sensitive.

The Home page displays.

4. Select **Settings > General > Software and Reset**.

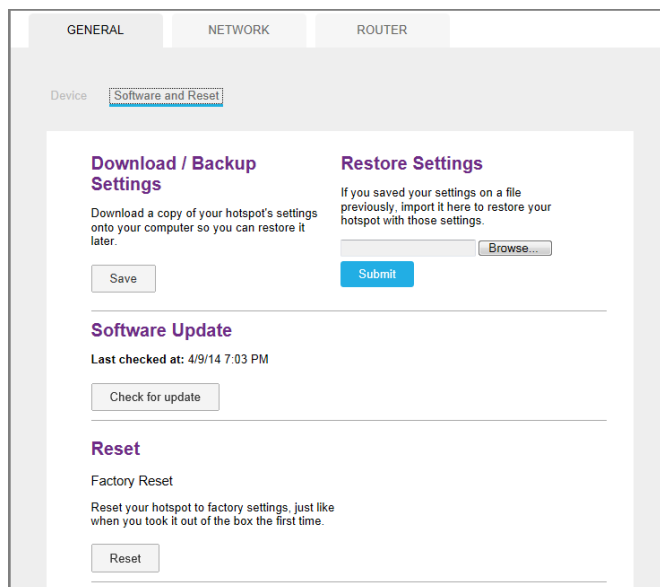

5. In the Download/Backup Settings section, click the **Save** button.
By default, the file (`export.cfg`) is saved to your Downloads folder.

➤ To restore hotspot settings:

1. From a computer or wireless device that is connected to your network, launch an Internet browser.
2. Enter **http://m.home** or **http://192.168.1.1**.


A login page displays.

3. Enter the administrator login password.

The default password is **admin**. The password is case-sensitive.

The Home page displays.

4. Select **Settings > General > Software and Reset**.

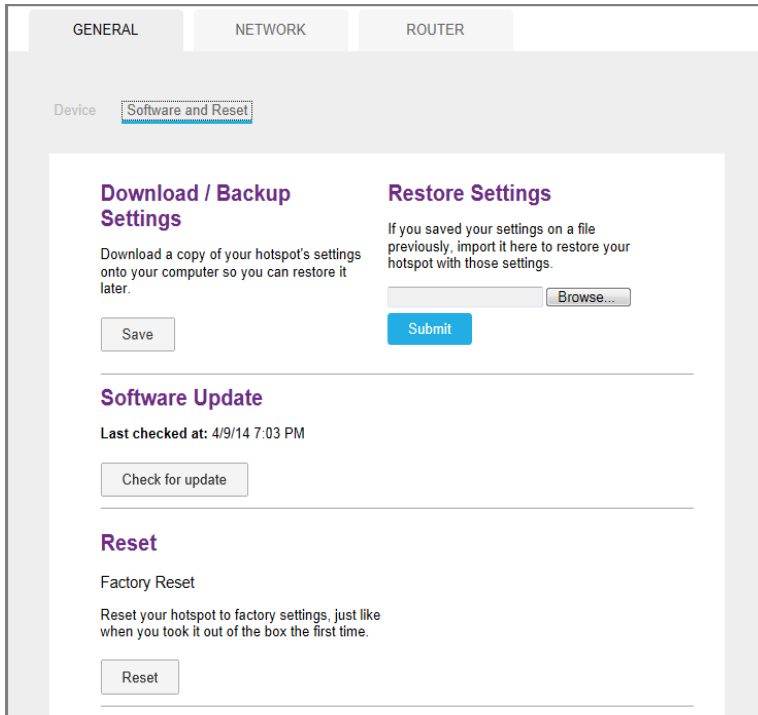

5. In the Restore Settings section, click the **Browse** button.

6. Navigate to the location where the `export.cfg` file is stored.

By default, hotspot setting files are saved to your Downloads folder.

7. Click the **Open** button.

Your hotspot is restored with the imported file settings.

Manage Wi-Fi Network Options

You can set Wi-Fi network options such as the RTS threshold and the fragmentation packet size on the hotspot web page. You can also control which Wi-Fi devices can access your network by adjusting MAC filtering parameters.

➤ **To set the Wi-Fi network options:**

1. From a computer or wireless device that is connected to your network, launch an Internet browser.
2. Enter **http://m.home** or **http://192.168.1.1**.

A login page displays.

3. Enter the administrator login password.

The default password is **admin**. The password is case-sensitive.

The Home page displays.

4. Select **Wi-Fi > Options**.


5. Set the Wi-Fi options:

- **Channel**. The Wi-Fi channel being used.

Best practice is to set the channel to **Auto**. The hotspot chooses the channel that provides the least interference.

- **RTS Threshold**. The smallest packet size (in bytes) used by the Request to Send/Clear to Send handshaking protocol.

Best practice is to use a value of 2347. If you are experiencing inconsistent data flow, you can make minor changes to this value to try to alleviate the problem.

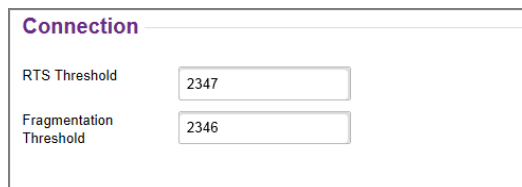

The screenshot shows a web interface titled "Connection". It contains two input fields: "RTS Threshold" with the value "2347" and "Fragmentation Threshold" with the value "2346".

- **Fragmentation Threshold**. The largest allowable size (in bytes) for a packet.

If a packet is larger than the threshold, it is sent in multiple packets, which can affect network performance. Keep this value as large as possible (up to 2346).

- **Broadcast Network Name**. If you select the **Show** radio button, your Wi-Fi network name (SSID) is broadcast to everyone nearby.

Select the **Hide** radio button if you do not want it broadcast.

The **Submit** button displays after you make a selection.

6. Click the **Submit** button.

Your settings are saved.

Enable SIM Security


Create another level of security by establishing a PIN that you must enter before you can manage the WWAN connection or view SMS messages.

➤ To enable SIM security:

1. From a computer or wireless device that is connected to your network, launch an Internet browser.
2. Enter **http://m.home** or **http://192.168.1.1**.

A login page displays.

- Enter the administrator login password.
The default password is **admin**. The password is case-sensitive.
The Home page displays.
- Select **Settings > Network > SIM Security**.

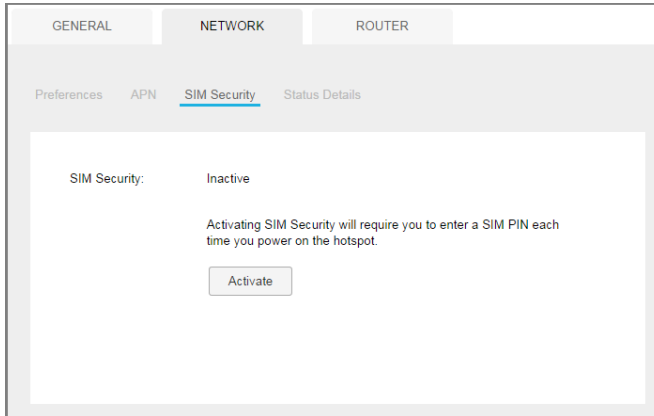

- Click the **Activate** button.
- Enter your PIN and click the **Submit** button.

If you enter an incorrect PIN three times, the SIM is blocked. If the SIM is blocked, contact your network service provider to receive a PUK number to unblock the SIM.


Configure Mobile Broadband

You can configure mobile broadband settings to view WAN details such as the active network, connection status, and signal strength. You can also adjust these settings to establish which users and applications can access your network.

View WAN Information

- **To view network information:**
 - From a computer or wireless device that is connected to your network, launch an Internet browser.
 - Enter **http://m.home** or **http://192.168.1.1**.
A login page displays.
 - Enter the administrator login password.
The default password is **admin**. The password is case-sensitive.
The Home page displays.

4. Select **Settings > Network > Status Details**.

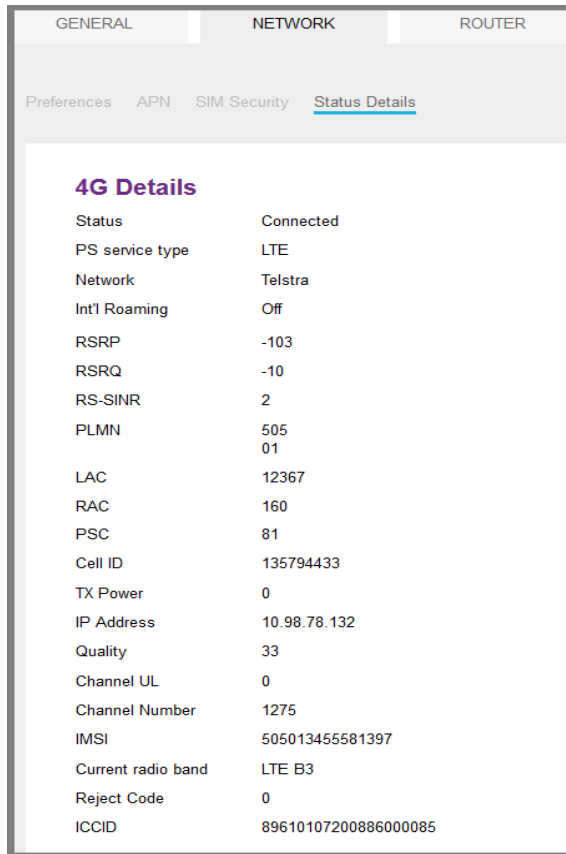

4G Details	
Status	Connected
PS service type	LTE
Network	Telstra
Int'l Roaming	Off
RSRP	-103
RSRQ	-10
RS-SINR	2
PLMN	505 01
LAC	12367
RAC	160
PSC	81
Cell ID	135794433
TX Power	0
IP Address	10.98.78.132
Quality	33
Channel UL	0
Channel Number	1275
IMSI	505013455581397
Current radio band	LTE B3
Reject Code	0
ICCID	89610107200886000085

Enable Port Forwarding

If your computer is hosting a server, you can enable port forwarding so that other users can access the server.

➤ To enable port forwarding:

1. From a computer or wireless device that is connected to your network, launch an Internet browser.
2. Enter **http://m.home** or **http://192.168.1.1**.

A login page displays.

3. Enter the administrator login password.

The default password is **admin**. The password is case-sensitive.

The Home page displays.

4. Select **Settings > Router > Port Forwarding**.

5. Select the **Enable** radio button.

The Port Forwarding list displays.

Incoming traffic is forwarded to specific ports and devices on your network using their local IP addresses.

Note: Port forwarding creates a security risk. When not required, disable port forwarding.

6. Enter the following port forwarding information:

- **Label.** Enter a descriptive name.
- **IP.** Enter the IP address of a connected device.
- **Port.** Enter the port number that the application uses.
- **Protocol.** If you are unsure, select **TCP**.

The **Submit** button displays after you make a selection.

7. Click the **Submit** button.

Your settings are saved.

Enable Port Filtering

You can select which applications (for example, HTTP, FTP, email servers) can access the Internet. Used with other security measures such as a firewall, port filtering can enhance network security.

➤ **To enable port filtering:**

1. From a computer or wireless device that is connected to your network, launch an Internet browser.
2. Enter **http://m.home** or **http://192.168.1.1**.
A login page displays.
3. Enter the administrator login password.

The default password is **admin**. The password is case-sensitive.

The Home page displays.

4. Select **Settings > Router > Port Filtering**.

The Port Filtering page displays.

5. From the **Port Filtering** list, select one of the following:
- **Black List.** Specific applications and services are not allowed to access the Internet (block list).
 - **White List.** Specific applications and services are allowed to access the Internet (allow list).

Only one list at a time can be active, either a black list or a white list.

6. Identify the ports to filter.

Enter a meaningful label that describes the application or service.

7. Enter the port being used.

8. Enter the communication protocol being used.

The **Submit** button displays after you make a selection.

9. Click the **Submit** button.

Your selections are saved.

Enable IP Pass Through Mode

To turn off the hotspot router functionality and assign the network IP address directly to the attached device, enable IP pass through.

If you make this change, the attached device restarts using a different driver configuration.



WARNING:

If you enable this feature, Wi-Fi is disabled and you must use a USB cable to tether the device.

Note: This feature is available to Windows computer users. If you are a Mac user, do not enable this option because you will be unable to access your device.

➤ **To enable IP pass through mode:**

1. From a computer or wireless device that is connected to your network, launch an Internet browser.
2. Enter **http://m.home** or **http://192.168.1.1**.

A login page displays.

3. Enter the administrator login password.

The default password is **admin**. The password is case-sensitive.

The Home page displays.

4. Select **Settings > Router > Basic**.

The screenshot shows the Netgear router web interface. At the top, there are tabs for 'GENERAL', 'NETWORK', and 'ROUTER'. Under the 'ROUTER' tab, there are sub-tabs for 'Basic', 'Port Forwarding', and 'Port Filtering'. The 'Basic' sub-tab is selected. The 'UPnP' section has 'UPnP' set to 'Off'. The 'LAN' section has 'IP Address' set to '192.168.1.1' and 'Netmask' set to '255.255.255.0'. The 'USB IP Address' is '192.168.1.4'. The 'IP Passthrough Mode' is set to 'Enabled'. Below this, there is a note: 'This option turns off the router function of the device and assigns the network IP address directly to the attached host. This option can be useful for implementing secure, enterprise VPNs. The device will reset after making this change to re-start using a different driver configuration.' Another note below that says: 'At this time, this feature is only available to PC users. If you are a Mac user, please do not enable this option as you will be unable to access your device. Please check support.netgear.com for further updates on future Mac support.' The 'VPN Passthrough' is set to 'On' and the 'DHCP Server' is set to 'Enabled'.

5. In the LAN section, select the **Enabled** radio button next to IP Passthrough Mode.
6. Click the **Submit** button.

Enable VPN Pass Through

To connect to a corporate network using VPN, you must first enable VPN connections (pass through).

➤ **To enable VPN pass through:**

1. From a computer or wireless device that is connected to your network, launch an Internet browser.
2. Enter **http://m.home** or **http://192.168.1.1**.
A login page displays.
3. Enter the administrator login password.
The default password is **admin**. The password is case-sensitive.
The Home page displays.
4. Select **Settings > Router > Basic**.

The screenshot shows the Netgear router's web interface. At the top, there are tabs for GENERAL, NETWORK, and ROUTER. Under the ROUTER tab, there are sub-tabs for Basic, Port Forwarding, and Port Filtering. The Basic sub-tab is selected. Under the UPNP section, the UPNP option is set to Off. Under the LAN section, the IP Address is 192.168.1.1, the Netmask is 255.255.255.0, and the USB IP Address is 192.168.1.4. The IP Passthrough Mode is set to Enabled. Below this, there is a note: "This option turns off the router function of the device and assigns the network IP address directly to the attached host. This option can be useful for implementing secure, enterprise VPNs. The device will reset after making this change to re-start using a different driver configuration." Below the note, there is a warning: "At this time, this feature is only available to PC users. If you are a Mac user, please do not enable this option as you will be unable to access your device. Please check support.netgear.com for further updates on future Mac support." At the bottom of the LAN section, the VPN Passthrough option is set to On, and the DHCP Server is set to Enabled.

5. In the LAN section, select the **On** radio button next to VPN Passthrough.
The **Submit** button displays after you make a selection.
6. Click the **Submit** button.
Your settings are saved.

Configure APN Details

Your mobile hotspot comes preconfigured with the access point name (APN) for your network service provider.

The hotspot checks the APN to determine the type of network connection to establish.

➤ **To add an APN for another network:**

1. From a computer or wireless device that is connected to your network, launch an Internet browser.
2. Enter **http://m.home** or **http://192.168.1.1**.
A login page displays.
3. Enter the administrator login password.
The default password is **admin**. The password is case-sensitive.
The Home page displays.
4. Select **Settings > Network > APN**.
The APN screen displays.
5. Click the **Add** button.

The screenshot shows a web interface for configuring APNs. At the top, there are three tabs: 'General', 'Network', and 'Router'. Below the tabs, there are four links: 'Preferences', 'APN', 'SIM Security', and 'Status Details'. The 'APN' link is highlighted. Underneath, there is a section titled 'Active' with a radio button selected for 'TelstraInternet (telstra.internet)' and a 'Details' button. Below this is a 'New Apn' form with the following fields:

- Name: [Text input field]
- APN: [Text input field]
- Authentication: [Dropdown menu with 'None' selected]
- PDP: [Dropdown menu with 'IPV4' selected]
- PDP Roaming: [Dropdown menu with 'None' selected]

At the bottom of the form are 'Save' and 'Cancel' buttons.

6. Enter the user name and password, if they are required for the wireless network.
7. Select the network authentication mode:
 - **None**
 - **PAP**
 - **CHAP**
 - **PAP or CHAP**
8. Change the PDP (data protocol), if necessary:
 - **IPV4**
 - **IPV6**
 - **IPV4V6**

9. Change the PDP roaming protocol, if necessary:

- **None**
- **IPV4**
- **IPV6**
- **IPV4V6**

Note: PDP roaming protocol is the IP protocol used while you are roaming (for example when you are traveling and the roaming network does not support IPv6).

10. Click the **Save** button.

The entry is added to the table.

➤ **To select the APN to use:**

1. From a computer or wireless device that is connected to your network, launch an Internet browser.

2. Enter **http://m.home** or **http://192.168.1.1**.


A login page displays.

3. Enter the administrator login password.

The default password is **admin**. The password is case-sensitive.

The Home page displays.

4. Select **Settings > Network > APN**.

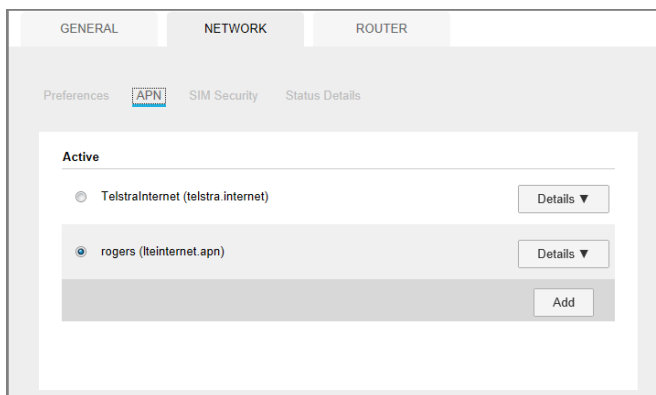


5. Select the **Active** radio button next to the APN entry.

The APN is selected.

➤ **To remove an APN entry:**

1. From a computer or wireless device that is connected to your network, launch an Internet browser.

2. Enter **http://m.home** or **http://192.168.1.1**.
A login page displays.
3. Enter the administrator login password.
The default password is **admin**. The password is case-sensitive.
The Home page displays.
4. Select **Settings > Network > APN**.
5. The APN page displays.
6. Click the **Details** button.

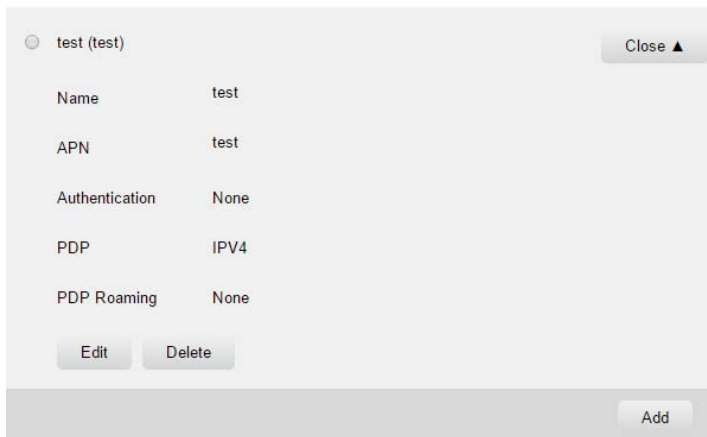

7. Click the **Delete** button.
The APN is removed.

Enable DMZ

In a demilitarized zone (DMZ) network configuration, a computer runs outside the firewall in the DMZ. This computer intercepts incoming Internet traffic, providing an extra layer of protection for the rest of the network, and sending all incoming data to a particular IP address.

- **To enable the DMZ and designate a computer to screen incoming traffic:**
 1. From a computer or wireless device that is connected to your network, launch an Internet browser.
 2. Enter **http://m.home** or **http://192.168.1.1**.
A login page displays.
 3. Enter the administrator login password.
The default password is **admin**. The password is case-sensitive.
The Home page displays.

4. Select **Settings > Router > Basic**.

The screenshot shows the router's configuration interface. At the top, there are three tabs: GENERAL, NETWORK, and ROUTER. The ROUTER tab is selected. Below it, there are three sub-tabs: Basic, Port Forwarding, and Port Filtering. The Basic sub-tab is active. The settings are organized into sections: UPnP, LAN, and DMZ. In the UPnP section, the 'Off' radio button is selected. In the LAN section, the IP Address is 192.168.1.1 and the Netmask is 255.255.255.0. The DHCP IP Range is 192.168.1.20 to 192.168.1.99, and the DHCP lease time is 720 minutes. The DNS mode is set to 'Auto'. In the DMZ section, the 'Off' radio button is selected for 'DMZ Enabled'.

5. In the DMZ section, select the **On** radio button next to DMZ Enabled.

6. In the **DMZ Address** field, enter the IP address of the computer to which you want all data sent.

If the hotspot is tethered using a USB cable, this address is 192.168.1.4. If the hotspot is connected using Wi-Fi, the first Wi-Fi client's IP address is usually 192.168.1.74.

The **Submit** button displays after you make a selection.

7. Click the **Submit** button.

Your settings are saved.

Set LAN Options

➤ To set the hotspot's LAN options:

1. From a computer or wireless device that is connected to your network, launch an Internet browser.
2. Enter **http://m.home** or **http://192.168.1.1**.

A login page displays.

3. Enter the administrator login password.

The default password is **admin**. The password is case-sensitive.

The Home page displays.

4. Select **Settings > Router > Basic**.

The screenshot shows the router's configuration interface. At the top, there are tabs for 'GENERAL', 'NETWORK', and 'ROUTER'. Under 'ROUTER', there are sub-tabs for 'Basic', 'Port Forwarding', and 'Port Filtering'. The 'Basic' sub-tab is active. The 'UPnP' section has a radio button for 'Off' selected. The 'LAN' section has input fields for 'IP Address' (192.168.1.1) and 'Netmask' (255.255.255.0). Below that, 'USB IP Address' is 192.168.1.4. 'IP Passthrough Mode' has 'Enabled' selected. A note explains that this option turns off the router function and assigns the network IP address directly to the attached host. Below the note, 'VPN Passthrough' has 'On' selected. At the bottom, 'DHCP Server' has 'Enabled' selected.

5. In the LAN section, enter the appropriate details.

If the DHCP server is enabled, it automatically assigns an IP address to each device on the network and manages its configuration information.

The DNS mode setting specifies how the DNS servers are obtained. If you select **Auto**, the servers use the DNS relay specified by the Internet provider.

The **Submit** button displays after you make a selection.

6. Click the **Submit** button.

Your settings are saved.

Frequently Asked Questions

This chapter provides answers to questions you might have about your hotspot. (Also see *Chapter 5, Troubleshooting*.) The chapter covers the following topics:

- *Why can't I connect a device to the hotspot?*
- *Why can't I access the Internet?*
- *Why isn't my battery charging?*
- *Why is the signal indicator always low?*
- *Why is the download or upload speed slow?*
- *How do I go back to the hotspot web page?*
- *What do I do if I forget my admin login password?*
- *How do I disconnect from the mobile broadband network?*
- *Why doesn't the Connect / Disconnect button appear on the hotspot web page?*
- *How can I extend the life of the battery?*
- *How do I turn the hotspot off?*
- *How do I find out how many users are connected to my hotspot's Wi-Fi networks?*
- *The touch screen is not lit. How do I know if the hotspot is still powered on?*
- *How do I find my computer's IP address?*
- *How do I find a device's MAC address?*
- *Where can I find more information?*

Why can't I connect a device to the hotspot?

If you are experiencing problems connecting to the hotspot, try the following suggestions:

- Turn off your device and take the battery out, wait 10 seconds, put the battery back in, and turn your device on.
- Restart your computer.
- Turn off or temporarily disable any security programs or firewalls.
- If possible, try using another computer or Wi-Fi device to connect to your hotspot. If you can, then the problem is with the device that cannot connect, not the hotspot.

Why can't I access the Internet?

If you are connected to the hotspot but cannot connect to the Internet, try the following suggestions:

- Check the display status on the touch screen.
- Make sure that network coverage is available in your area.
- Make sure that your micro SIM card is active and enabled with data services.
- Wait one to two minutes for the hotspot to initialize.
- Confirm that your account is activated and that no other Internet connections are active.
- Switch your hotspot off and on and restart your computer or Wi-Fi device.

Why isn't my battery charging?

If you are in a low-coverage area, are transferring a lot of data, or left the hotspot in a hot location, the internal temperature of the hotspot can rise above 45°C. In these conditions, the battery cannot be charged due to safety limits with lithium-ion battery technology.

Check to ensure that the USB cable and the AC wall charger are connected securely and are working correctly.

Why is the signal indicator always low?

Your hotspot's reception is poor. Try moving it to a location with a clear view of the sky (for example, near a window).

Why is the download or upload speed slow?

Data transfer speed depends on signal strength and interfering radio sources like electrical generators or other hotspot Wi-Fi devices. Review the following possibilities:

- Check your signal strength and network type (for example, LTE 4G is generally faster than 3G).
- Check Wi-Fi interference by powering the hotspot off and on to find a better Wi-Fi channel.
- Switch Wi-Fi channel from 2.4 GHz to 5 GHz.
- If the Telstra network signal is low, consider using external antennas or cradle the hotspot with built-in high-gain antennas.

How do I go back to the hotspot web page?

➤ To view the hotspot web page:

1. From a computer or wireless device that is connected to your network, launch an Internet browser.
2. Enter **http://m.home** or **http://192.168.1.1**.
A login page displays.
3. Enter the administrator login password.
The default password is **admin**. The password is case-sensitive.

What do I do if I forget my admin login password?


The default admin login password is **admin**, and the hotspot web page URL is <http://m.home> or <http://192.168.1.1>.

If you changed the admin login password and can't remember the password that you created, you must set the hotspot back to factory defaults.


➤ To reset the hotspot from the touch screen:

1. To wake up the device, press the **Power** key.


2. Tap the **Home** (🏠) button.

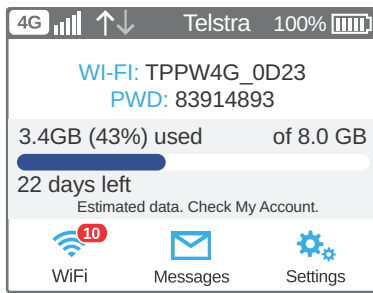


3. Tap the **Settings** button.

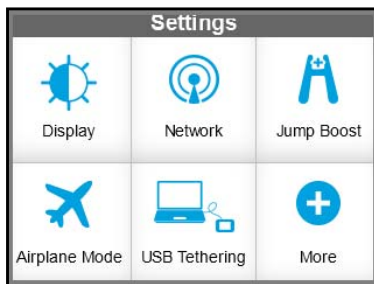


4. Tap the **More** button.

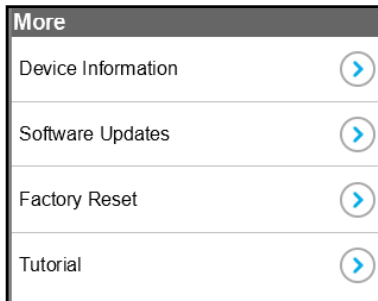

5. Tap the **Factory Reset >** button.

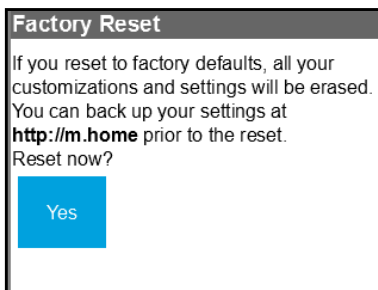

6. Tap the **Yes** button.

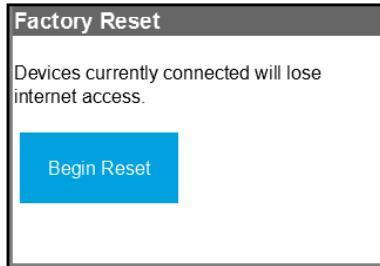

7. Tap the **Begin Reset** button.
A factory reset takes about one minute.
8. After the device resets, reconnect Wi-Fi devices.


How do I disconnect from the mobile broadband network?

➤ To disconnect from the network from the hotspot web page:

1. From a computer or wireless device that is connected to your network, launch an Internet browser.
2. Enter **http://m.home** or **http://192.168.1.1**.
A login page displays.
3. Enter the mobile hotspot password.
The default password is **admin**. The password is case-sensitive.
The Home page displays.
4. Click the **Disconnect** button (in the Connection Details section).

➤ To disconnect from the network from the touch screen:

1. To wake up the device, press the **Power** key.
1. Tap the **Home** (🏠) button.

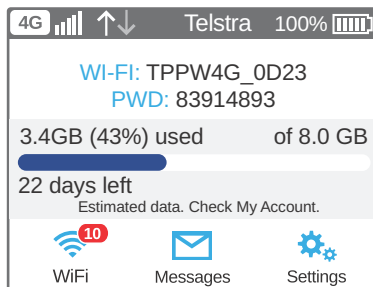

2. Tap the **Settings** button.
3. Tap the **Network** button.
4. Tap the > next to Status Disconnect.

Your hotspot is disconnected from the network.

Why doesn't the Connect / Disconnect button appear on the hotspot web page?

You can use the **Connect / Disconnect** button only when you are logged in as an administrator.

➤ **To log in as an administrator:**


1. From a computer or wireless device that is connected to your network, launch an Internet browser.
2. Enter **http://m.home** or **http://192.168.1.1**.

A login page displays.

3. Enter the password in the **Sign In** field.

The default password is **admin**. The password is case-sensitive.

4. Click the **Sign In** button.

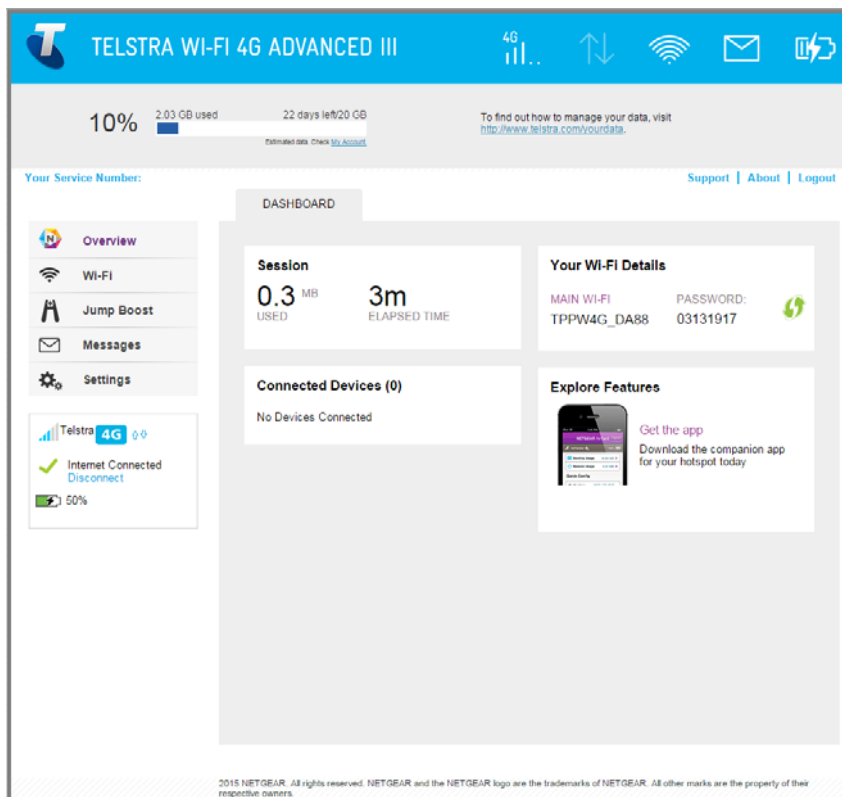

How can I extend the life of the battery?

For information about extending the life of the battery, see [Extend Battery Life](#) on page 45.

How do I turn the hotspot off?

Press and hold the **Power** key for a few seconds.

How do I find out how many users are connected to my hotspot's Wi-Fi networks?

The number on the Wi-Fi icon on the hotspot's touch screen is the number of users (or devices) connected to your Wi-Fi network. A list of connected devices appears in the hotspot Connected Devices section. For more information about the devices or users connected to your network, see [View or Block Connected Users](#) on page 31.

The touch screen is not lit. How do I know if the hotspot is still powered on?

The touch screen dims to save energy. The LED continues to blink slowly to indicate that the mobile hotspot is still powered on. To wake up the touch screen, press and quickly release the **Power** key.

How do I find my computer's IP address?

The steps for finding your computer's IP address depend on the operating system. If your device runs an operating system not listed here, see the appropriate operating system documentation.

- **To find the IP address on a Windows 7, Windows Vista, or Windows XP device:**
 1. Open the command prompt window:
 - a. Select **Start > Run**.
 - b. Enter `cmd` or `command` and click the **OK** button.
 2. At the command prompt, enter `ipconfig` and press the Enter key.
 3. Write down the IP address for the entry that relates to the wireless network connection.
The IP address might be listed under IPv4 Address or something similar.
- **To find the IP address on a Windows 8 device:**
 1. In the Charms bar, click the **Search** icon.

2. Select **Command Prompt**.
3. At the command prompt, enter `ipconfig` and press the Enter key.
4. Write down the IP address for the entry that relates to the wireless network connection.
The IP address might be listed under IPv4 Address or something similar.

➤ **To find the IP address on a Mac OS X device:**

1. From the Apple menu, select **System Preferences > Network**.
2. Select the wireless adapter.

The IP address is displayed in the right pane.

➤ **To find the IP address on devices running other operating systems:**

Refer to the user documentation for your operating system or computer.

How do I find a device's MAC address?

You must know the MAC address for a device when you are doing the following:

- Assigning an IP address based on a MAC address (when using DHCP)
- Allowing or denying devices access to your Wi-Fi network (MAC filtering)

Tip: To display a list of connected devices, including the MAC address of each device, go to the hotspot web page and log in as an administrator. The connected devices list appears on the left side of the Home page. Click the device links to display IP and MAC addresses.

The steps for finding a device's MAC address depend on the operating system. If your device runs an operating system not listed in the following procedures, see the appropriate operating system documentation.

➤ **To find the MAC address on a Windows 7, Vista, or XP device:**

1. Open the command prompt window:
 - a. Select **Start > Run**.
 - b. Enter `cmd` or `command` and click the **OK** button.
2. At the command prompt, enter `ipconfig /all` and press the Enter button.
3. Write down the physical address for the entry that relates to the wireless network connection.

It appears as a series of numbers and letters. This is the MAC address of your wireless adapter.

➤ **To find the MAC address on a Windows 8 device:**

1. In the Charms bar, click the **Search** icon.
2. Select **Command Prompt**.
3. At the command prompt, enter `ipconfig /all` and press the Enter button.
4. Write down the physical address for the entry that relates to the wireless network connection.

It appears as a series of numbers and letters. This is the MAC address of your wireless adapter.

➤ **To find the MAC address on a Mac OS X device:**

1. From the Apple menu, select **System Preferences > Network**.
2. Select the wireless adapter that is connecting to the routing hardware.
3. Select **Advanced**.
4. Select **Ethernet**.

The Ethernet ID is displayed. This is the same as the MAC address.

Where can I find more information?

Review the following:

- The *Quick Start Guide* that came with your mobile hotspot.
- Visit support.netgear.com, click the **Support for Home Products** link, search for your network service provider, and select your hotspot from the list of products to do the following:
 - Update the firmware on your device (if an update is available)
 - View a tutorial
- Learn tips and tricks at <http://www.netgear.com/learningcenter/mobile> to get the most from your hotspot.
- Information about accessories is available at <http://www.netgear.com/telstraaccessories>.

5. Troubleshooting

5

This chapter provides suggestions for troubleshooting problems that might arise when you are using your mobile hotspot. The chapter covers the following topics:


- *The Wi-Fi network name does not appear in the list of networks*
- *The No Signal icon displays on either the touch screen or the hotspot web page*
- *Your device cannot access the hotspot web page when connected to a VPN*
- *The hotspot cannot connect to a computer running Windows Vista*
- *The hotspot does not connect to your service provider's network*
- *Reset the hotspot*
- *View Alerts*

The Wi-Fi network name does not appear in the list of networks

If you do not see the hotspot's Wi-Fi networks from your Wi-Fi-enabled device, try these suggestions:

- Refresh the list of networks.
- If the touch screen is dark, the Wi-Fi radio might be asleep. Press the **Power** key to wake the hotspot.
- If the hotspot is tethered to your computer, make sure that Wi-Fi is set to stay on when the hotspot is tethered. See *Reset the hotspot* on page 97.

The No Signal icon displays on either the touch screen or the hotspot web page

If the No Signal icon () displays on either the touch screen or the hotspot web page, make sure that you are in your network service provider's coverage area.

Your device cannot access the hotspot web page when connected to a VPN

If you are using your hotspot while connected to a VPN, you might not be able to access the hotspot web page using <http://m.home>.

To directly access the hotspot web page hosted on the device, enter the address **<http://192.168.1.1>** in your browser.

The hotspot cannot connect to a computer running Windows Vista

A known issue exists whereby computers running Microsoft Windows Vista cannot obtain an IP address from certain routers. More information and a fix are available at <http://support.microsoft.com/kb/928233>, or visit the Microsoft support website and search for knowledge base article 928233.


The hotspot does not connect to your service provider's network

If your hotspot does not connect to your service provider's mobile broadband network, try the following suggestions:

- Make sure that your micro SIM account is active. To check micro SIM status, contact your Internet service provider.
- If you use a prepaid micro SIM card, make sure that the account balance is positive.
- If your mobile hotspot still does not connect, you might need to create or update the default connection profile.

➤ To check the default connection profile settings:

1. From a computer or wireless device that is connected to your network, launch an Internet browser.
2. Enter **http://m.home** or **http://192.168.1.1**.
A login page displays.
3. Enter the mobile hotspot password.
The default password is **admin**. The password is case-sensitive.
The Home page displays.
4. Select **Settings > Network > APN**.

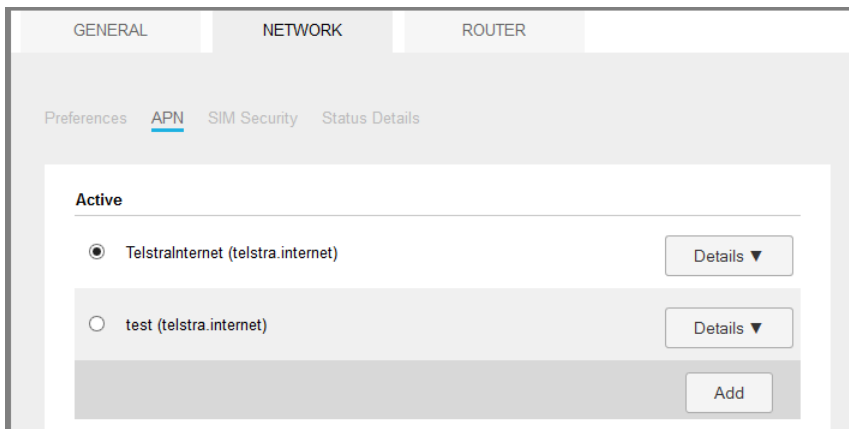

5. Review ISP settings.

Reset the hotspot


You can reset the hotspot to the factory settings. This is useful if you forgot your admin login password for the hotspot web page.

If you reset the hotspot, all of your customizations are lost. If you want to keep them, save them before doing the reset and restore them afterward. See [Back Up and Restore Hotspot Settings](#) on page 72.


Note: When you reset the hotspot, any currently connected devices lose access and must be reconnected after the hotspot restarts.

➤ **To reset the hotspot from the touch screen:**


1. To wake up the device, press the **Power** key.
2. Tap the **Home** (🏠) button.

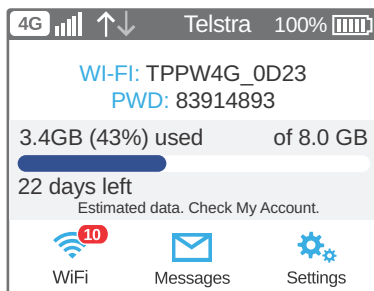


3. Tap the **Settings** button.

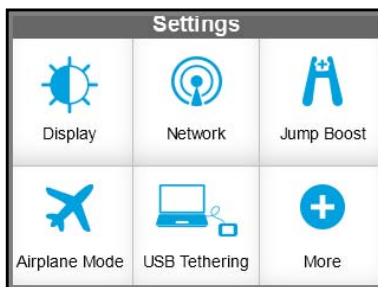


4. Tap the **More** button.

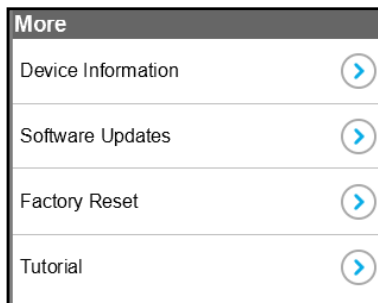

5. Tap the **Factory Reset >** button.

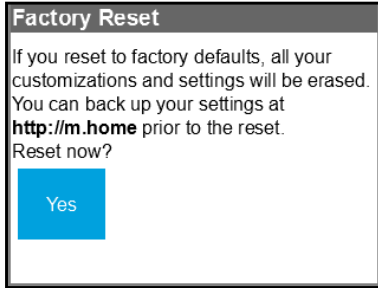

6. Tap the **Yes** button.

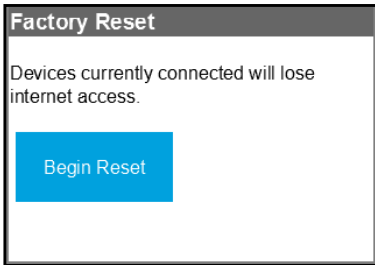

7. Tap the **Begin Reset** button.
A factory reset takes about one minute.
8. After the device resets, reconnect Wi-Fi devices.

View Alerts

Your mobile hotspot displays alerts to advise you of device status changes.

SIM Not Installed

Ensure that the micro SIM card is installed correctly. See *Install the Micro SIM Card* on page 8.

SIM Error — Check SIM

Ensure that your network service provider's micro SIM card is inserted in the hotspot. If a problem still exists, contact customer service. The micro SIM card might be damaged and need replacing.

SIM Locked

- **To unlock the micro SIM card from the hotspot web page:**
1. Contact Telstra customer service for the PIN to unlock the micro SIM card.
 1. From a computer or wireless device that is connected to your network, launch an Internet browser.
 2. Enter **http://m.home** or **http://192.168.1.1**.
A login page displays.
 3. Enter the administrator login password.
The default password is **admin**. The password is case-sensitive.
The Home page displays.
 4. Enter the micro SIM PIN when prompted.
 5. Click the **Save** button.

Temperature-Related Alerts

The hotspot is designed to work over a wide temperature range. (For information, see *Environmental Specifications* on page 104.) The mobile hotspot shuts down automatically if it goes out of the supported temperature range.

Move the device to an area where the temperature is more suitable and, if the mobile hotspot is too warm, make sure that the area is well ventilated and air can circulate around the device.

Note: The battery might not recharge if the mobile hotspot is outside the operating temperature range.

Connection Alerts

Some connection alerts include instructions for resolving them. For other connection alerts, including those in the following table, contact customer service for assistance.

Table 4. Connection alerts

Alert	Description
8	Operator determined barring
25	LLC or SNDCP failure
26	Insufficient resources
27	Missing or unknown APN

Table 4. Connection alerts (continued)

Alert	Description
28	Unknown PDP address or type
29	User authentication failed
30	Activation rejected by GGSN
32	Service Option not supported
33	Service Option not subscribed
34	Service Option temporarily out of order
36	Regular deactivation
37	QoS not accepted
38	Network failure
39	Reactivation required
40	Feature not supported
41	Semantic error in the TFT operation
42	Syntactical error in the TFT operation
43	Unknown PDP context
44	PDP context without TFT already activated
45	Semantic errors in packet filters
46	Syntactical errors in packet filters
67	Connection error
81	Invalid transaction identifier value
95	Semantically incorrect message
96	Invalid mandatory information
97	Message type nonexistent or not implemented
98	Message type not compatible with the protocol state
99	Information element non existent or not implemented
100	Conditional IE error
101	Message not compatible with the protocol state
111	Protocol error, unspecified
256	Invalid Connection ID
258	Invalid PRI NSAPI

Table 4. Connection alerts (continued)

Alert	Description
259	Invalid Field
260	SNDCP Failure
261	RAB Setup Failure
262	No GPRS Context
263	PDP Establish Max Timeout
264	PDP Activate Max Timeout
265	PDP Modify Max Timeout
266	PDP Inactivate Max Timeout
267	PDP Lower layer Error
268	PDP Duplicate
269	UE RAT Change

A Specifications



This appendix covers the following topics:

- *Mechanical Specifications*
- *Environmental Specifications*
- *Supported RF Bands*

Mechanical Specifications

Table 5. Physical dimensions

Parameter	Dimension
Weight	132 g (4.66 oz)
Length	112 mm (4.41 in.)
Width	69 mm (2.7 in.)
Thickness	15 mm (.59 in.)

Environmental Specifications

Table 6. Recommended operating and storage temperatures

Environment	Temperature
Operating temperature	0°C to 35°C (32 F to 95°F)
Storage temperature	-10°C to +60°C (14°F to 140°F)

Supported RF Bands

Table 7. Supported RF bands

Technology	Bands
4G LTE CA	1800+700, 1800+2600, 2600+700, 2600+2600, 700+1800+2600, 1800+2600+2600, 700+2600+2600 MHz
4G LTE	700, 900, 1800, 2100, 2600 MHz
3G	850, 900, 1900, 2100 MHz

B Tips and Safety Guidelines for Lithium-Ion Batteries



Battery Tips

- Charge batteries in a room-temperature environment, which is generally between 68° F and 79° F (20° C and 26° C). Charging may be temporarily disabled if the battery temperature exceeds 113° F (60° C).
- If a battery exhibits significantly shorter runtime or discharge capacity compared to new, it may have reached the end of its reasonable lifetime; consider replacing it.
- A battery that does not charge or exhibits excessive charging time may have reached the end of its life and may need to be replaced.
- All batteries degrade and lose charge capacity over time as a result of use or storage, and eventually need to be replaced.
- Batteries are best stored in a cool, dark, dry place. Avoid storage in direct sunlight and in vehicles parked outdoors.
- Batteries may get warm while charging and discharging; this is normal behavior for all batteries.
- Use the AC adapter and the USB cable that came with this device.
- Use the latest firmware; check for updates on a regular basis.
- Device performance and runtime are affected by workload or usage. Higher workloads or usage can lead to higher battery temperatures and faster battery power consumption.
- Streaming large amounts of data affects the power consumption and reduces the operating time of the battery.

General Battery Safety

- Stop using a battery if its case appears damaged, swollen, or compromised. Examples include, but are not limited to, leaking, odors, dents, corrosion, rust, cracks, swelling, melting, and scratches.
- Do not expose batteries to fire or other heat- generating environments.
- Do not place the battery or the device in areas that may get hot. Examples include, but are not limited to, on or near a space heater, cooking surface, cooking appliance, iron, radiator, or fireplace.

- Do not get the battery or the device wet. Even though they may dry and appear to operate normally, the circuitry can slowly corrode and defeat its safety circuitry.
- Do not crush, puncture, deform, or put a high degree of pressure on the battery, which can cause an internal short circuit, resulting in overheating.
- Avoid dropping the battery or the device. Dropping it, especially on a hard surface, may cause damage to the battery and the device. If you suspect damage to the battery or the device, replace it.
- When the battery is outside the device, do not allow the battery to come in contact with metal objects, such as coins, keys, jewelry, or tools.
- Do not disassemble or modify batteries. Do not use a battery for anything other than its intended purpose.

Appropriate Batteries and Chargers

- Use only approved batteries in the device. Only purchase products and accessories recommended by NETGEAR or your carrier. Use of unapproved batteries, products, or accessories will void your warranty.
- Do not use incompatible batteries and chargers. Some websites and second-hand dealers, not associated with reputable manufacturers and carriers, may sell incompatible or even counterfeit batteries and chargers.
- If you are unsure about whether a replacement battery or charger is compatible, contact NETGEAR.

Battery Disposal

- Disposal regulations vary by region. Dispose of old batteries and equipment in compliance with your local regulations.
- Proper disposal might include recycling programs for batteries, cell phones, or other electronic waste.
- Do not dispose of batteries in a fire.

